 
 
 
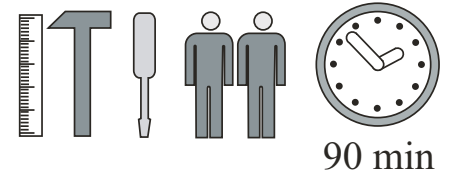 
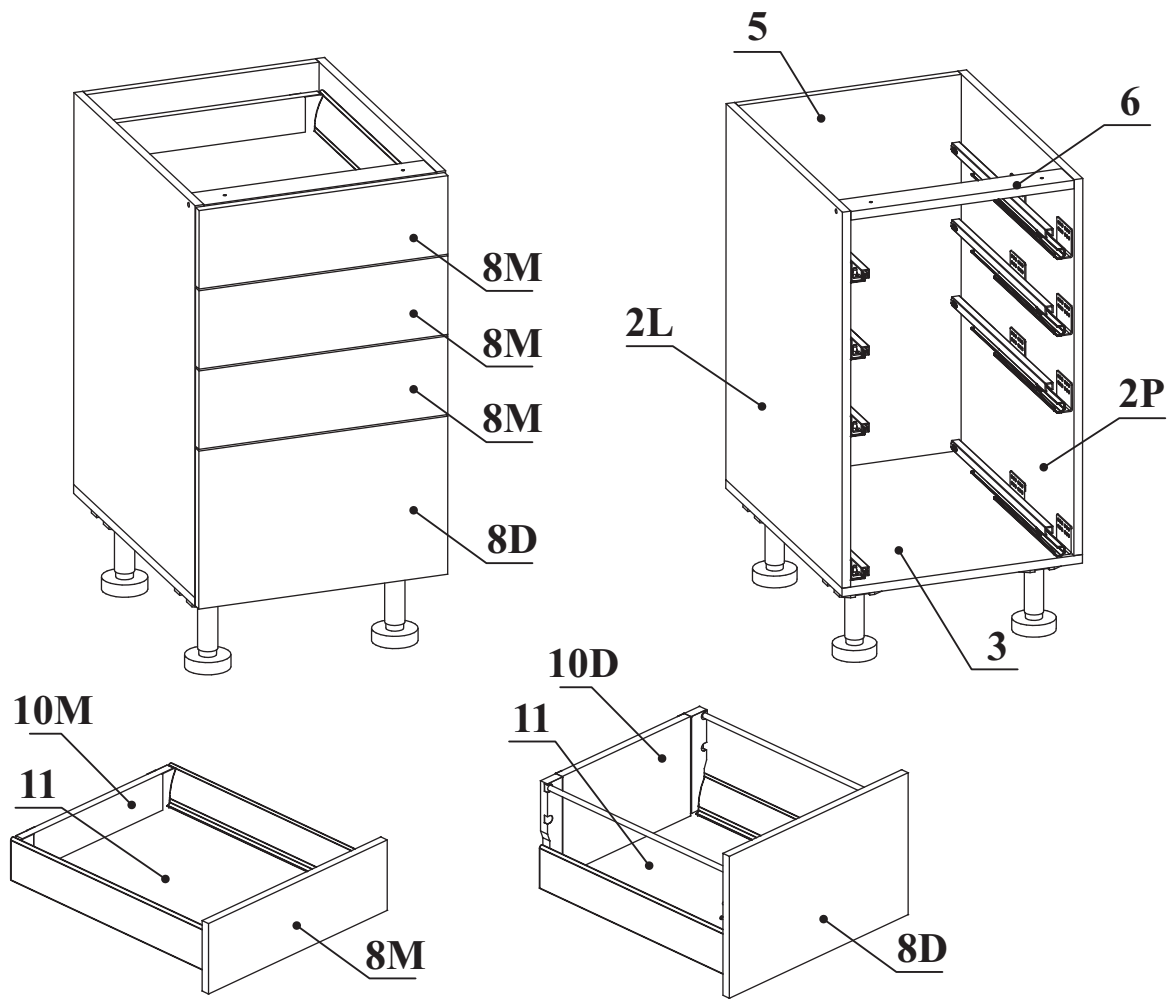 
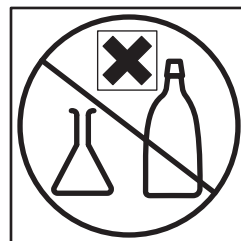 
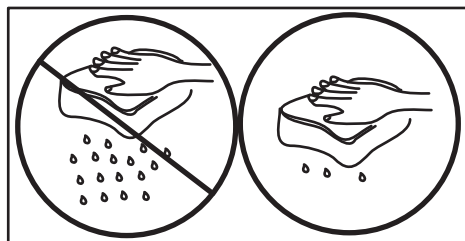 
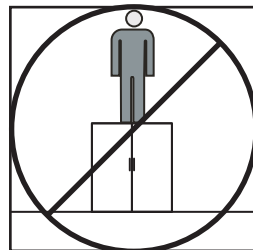 
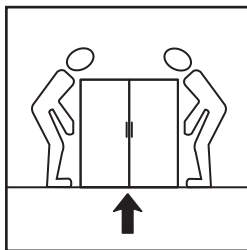 
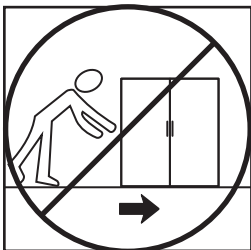 
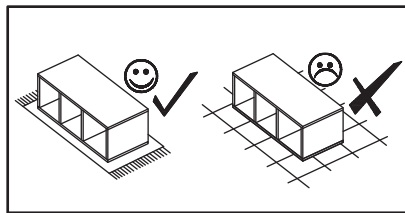 
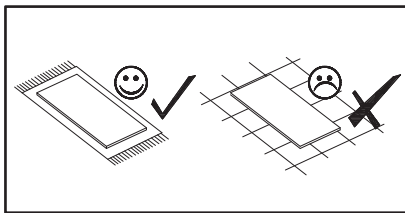 
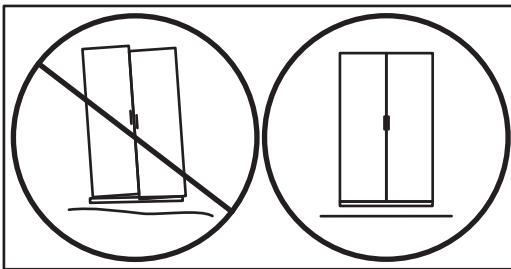 


EURO




S45SZ4A, S60SZ4A

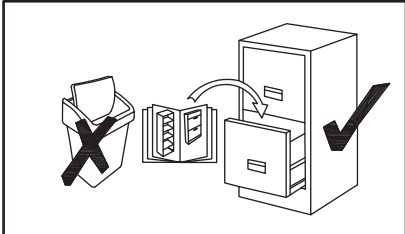


KM1 X2		Z2 X8									
A1 X6		B4 X4		B5 X4		G5 X4		D30 X8		UP6 X2	
RE X1		D14 X16		B11 X8		G4 X8		D10 X16		G2 X1	
AM X4		AM2 X1		AM3 X3		I15 X4		I16 X2		D27 X16	

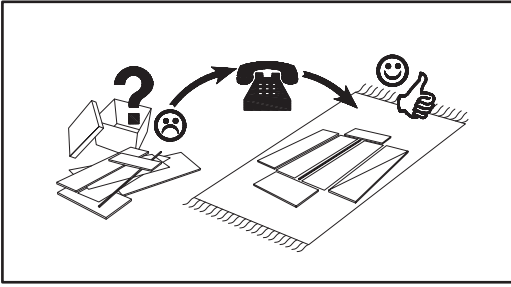



 
 
 
1

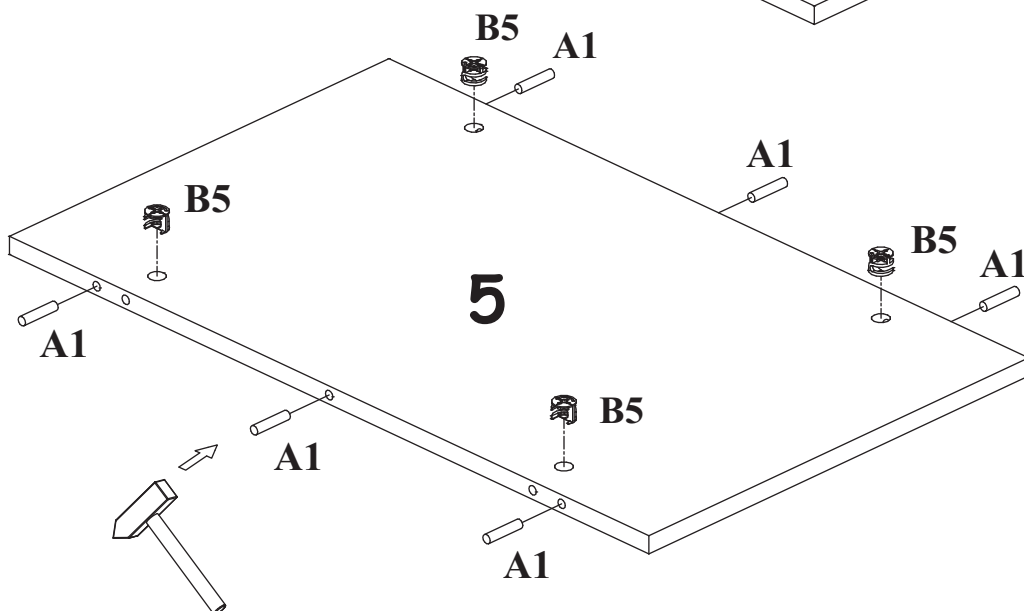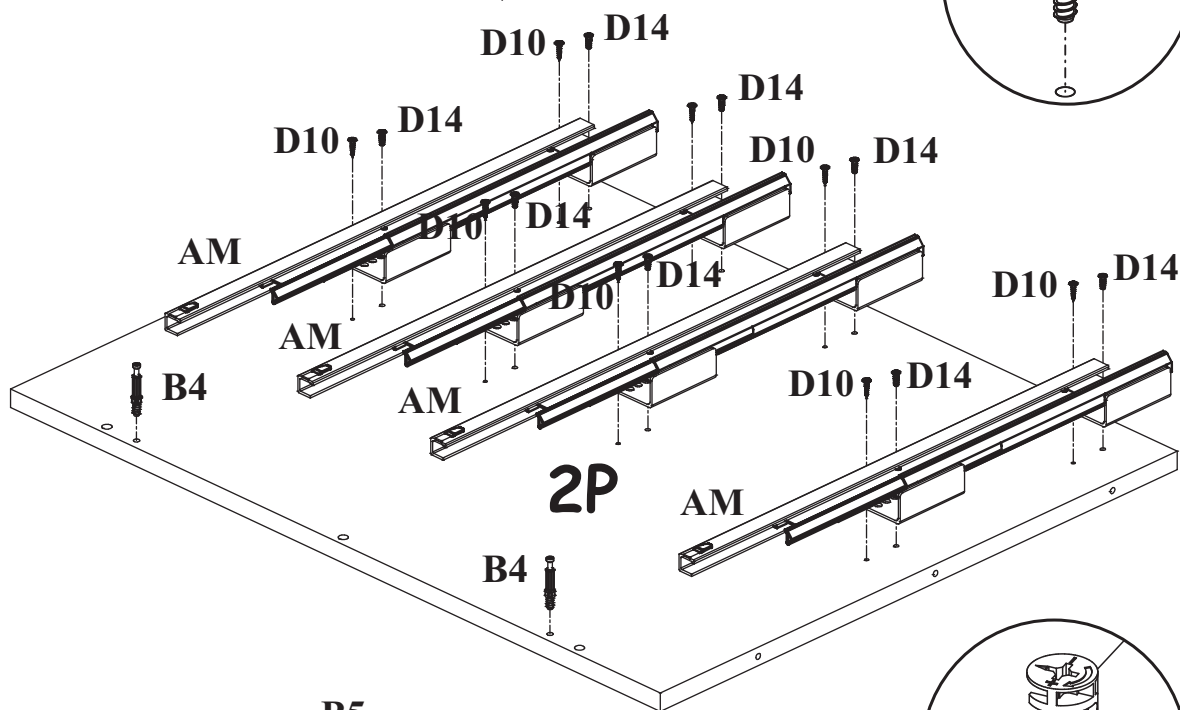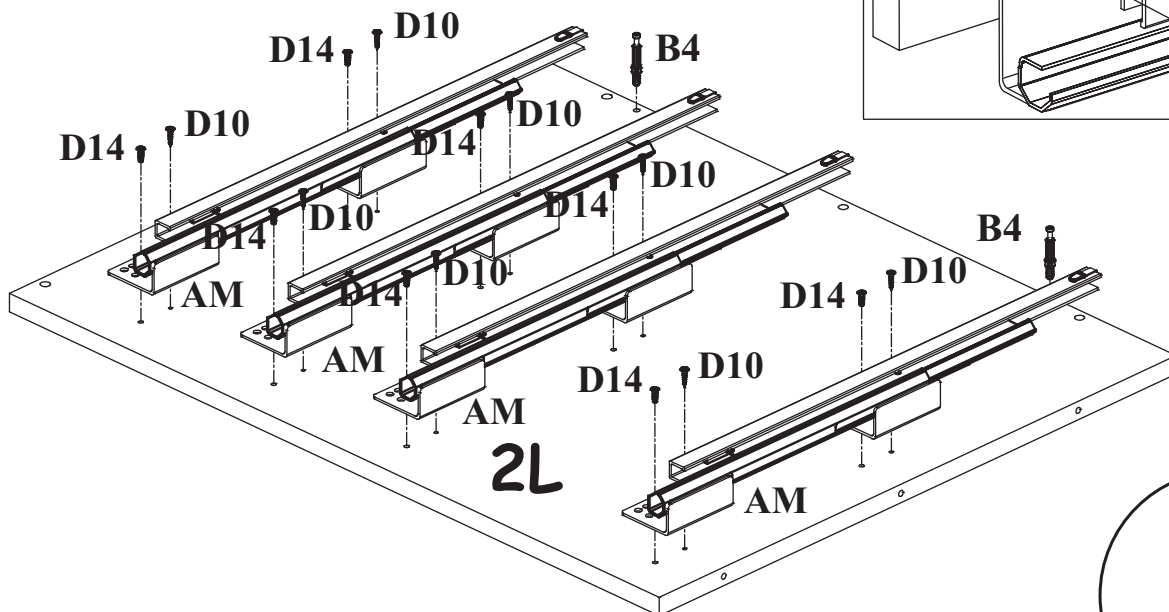



2

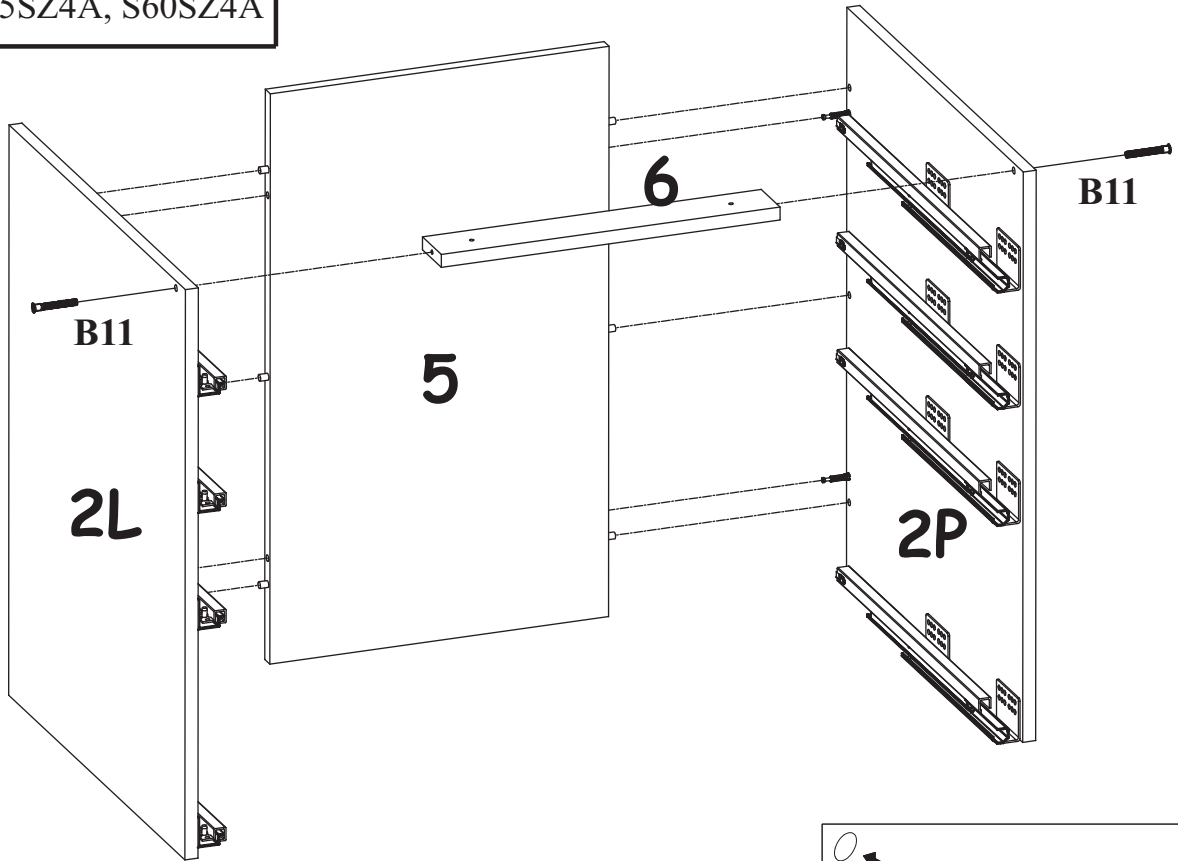 


3

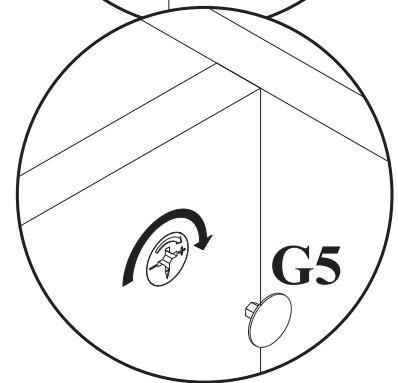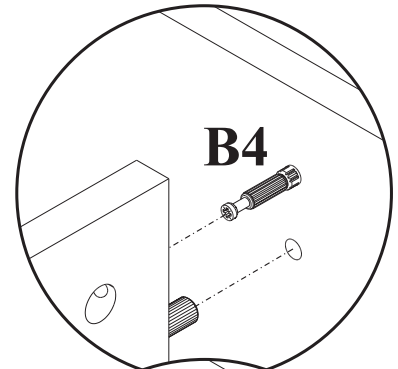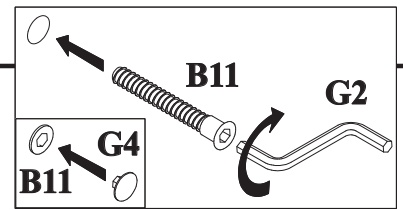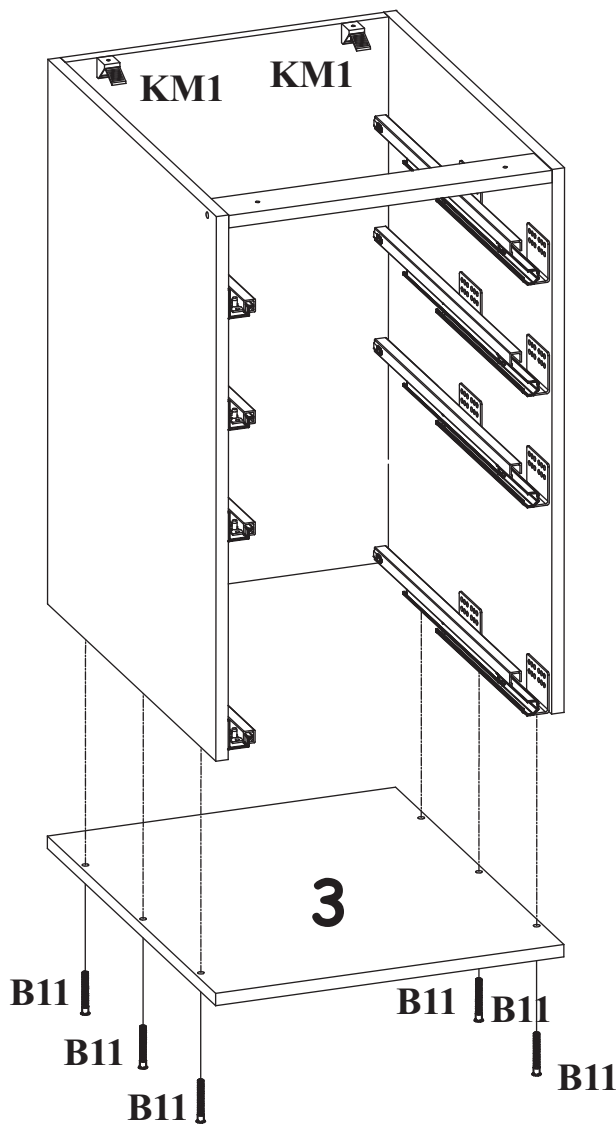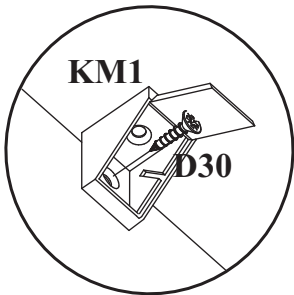     




4

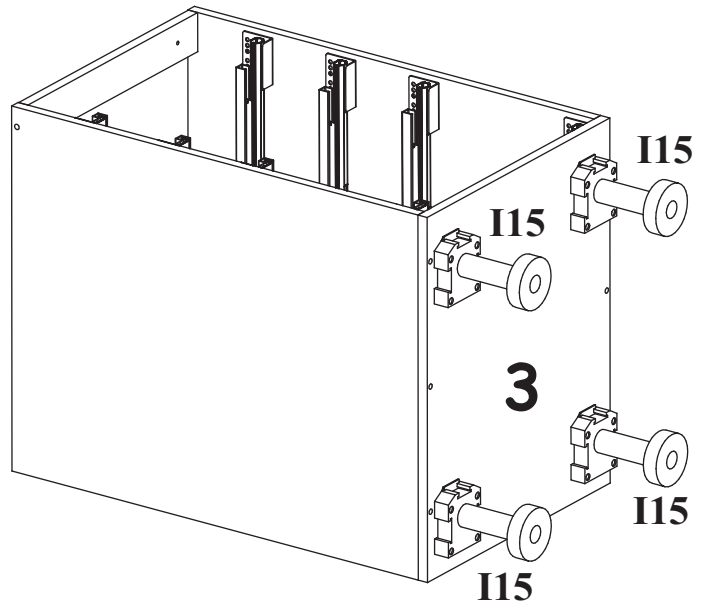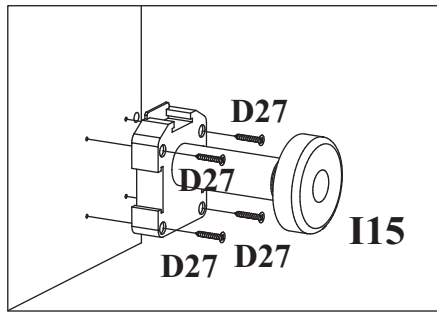  

5

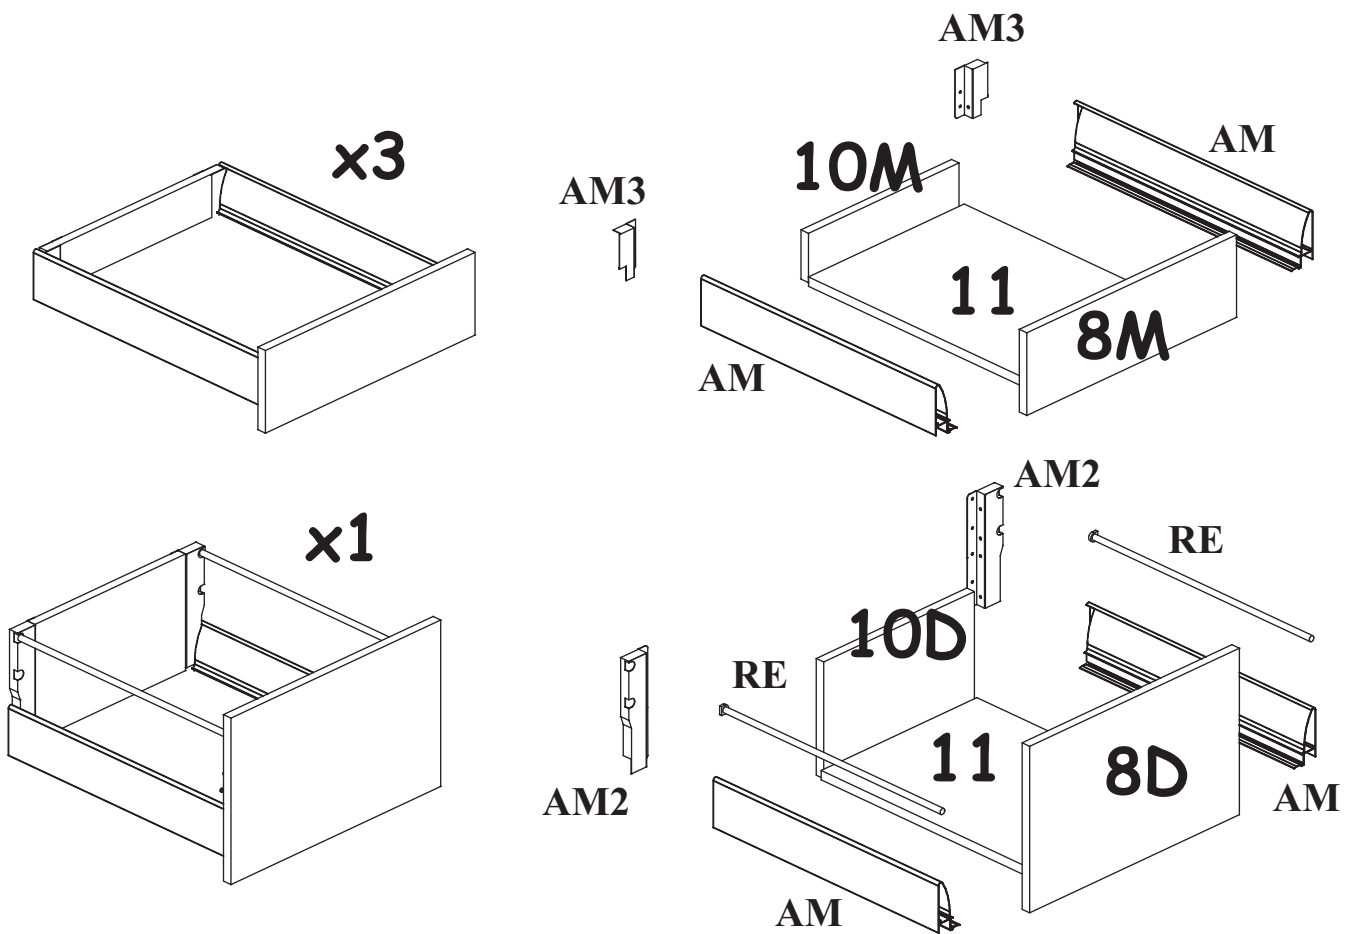 

   See additional installation instructions

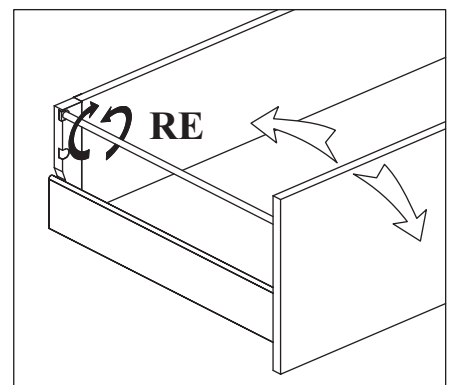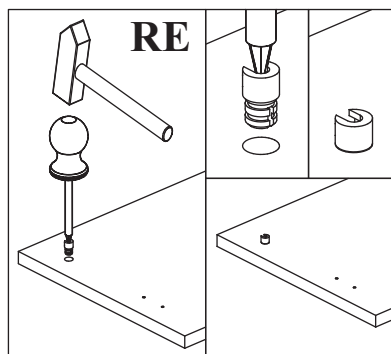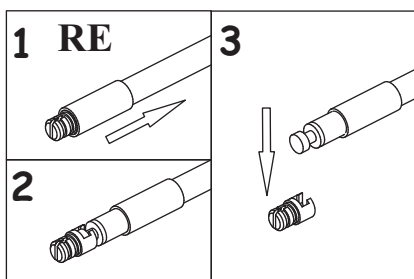

6

