

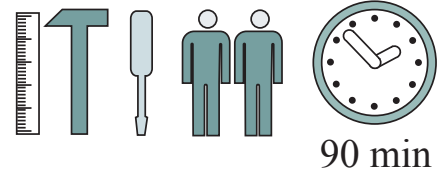

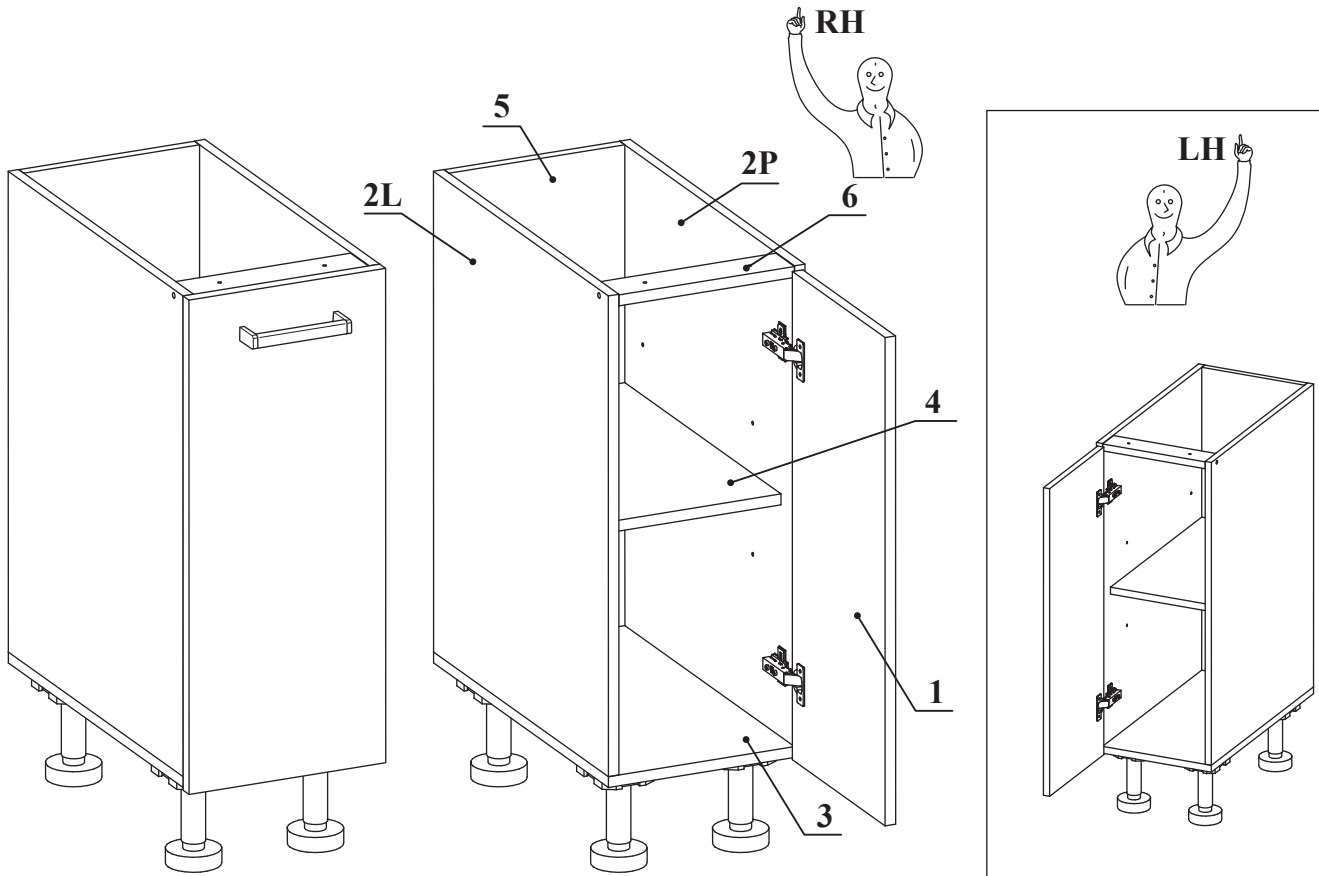
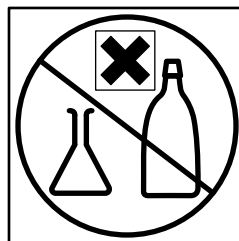
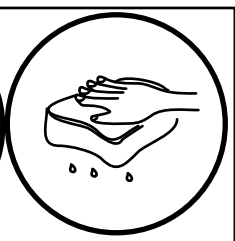
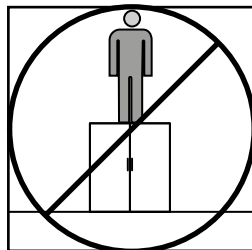
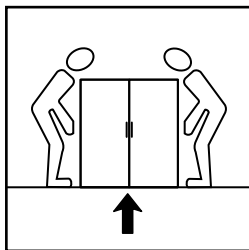
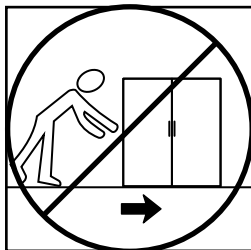
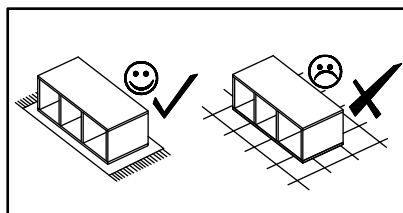
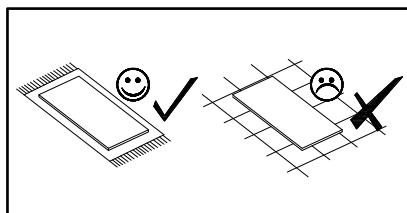
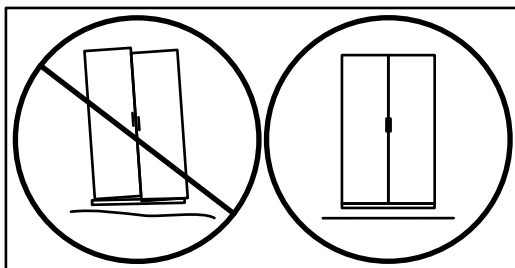
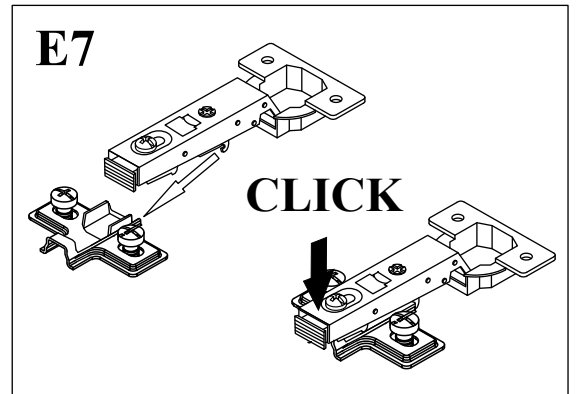
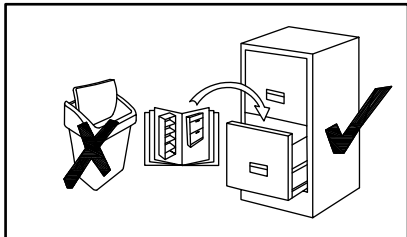








# FLORENCE S30, S40, S50

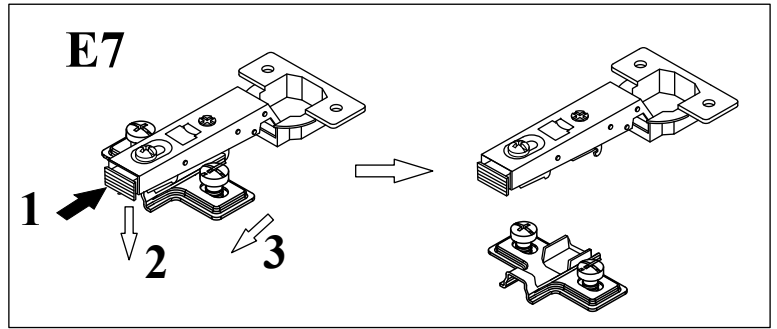


D26 X2 Ø4x22	ZN X1								
A1 X6 Ø8x36	B4 X4	B5 X4 Ø15x12	G5 X4	UP6 X4 UPØ4x30	G7 X4				
E7 X2	E8 X2	B11 X8 Ø7x50	G4 X8	D10 X4 USØ3,5x13	G2 X1				
D27 X16 USØ4x35	I15 X4 L-150 mm	I16 X2	D30 X8 USØ3,5x16	Z2 X14 Ø5	KM1 X2				

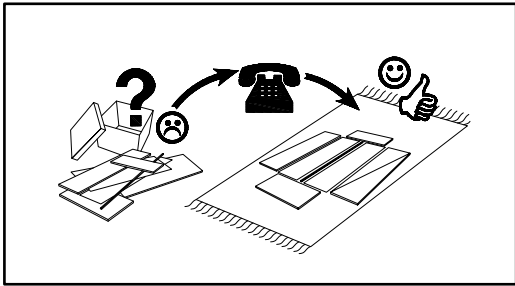


1

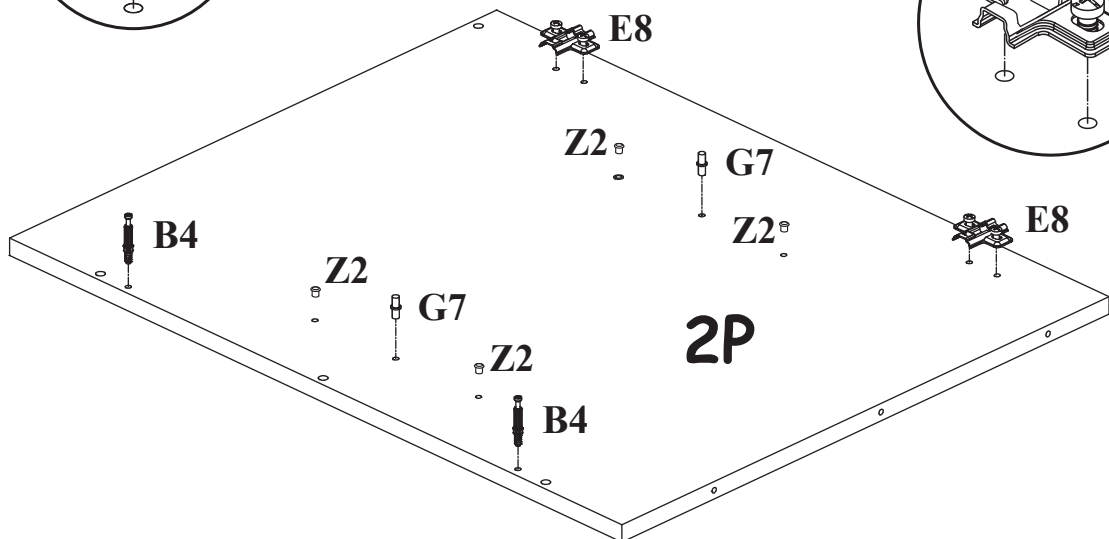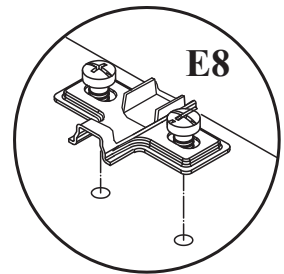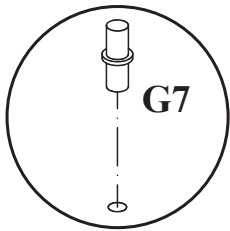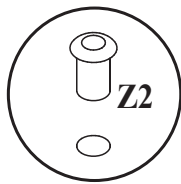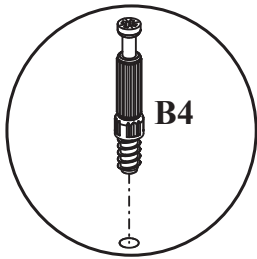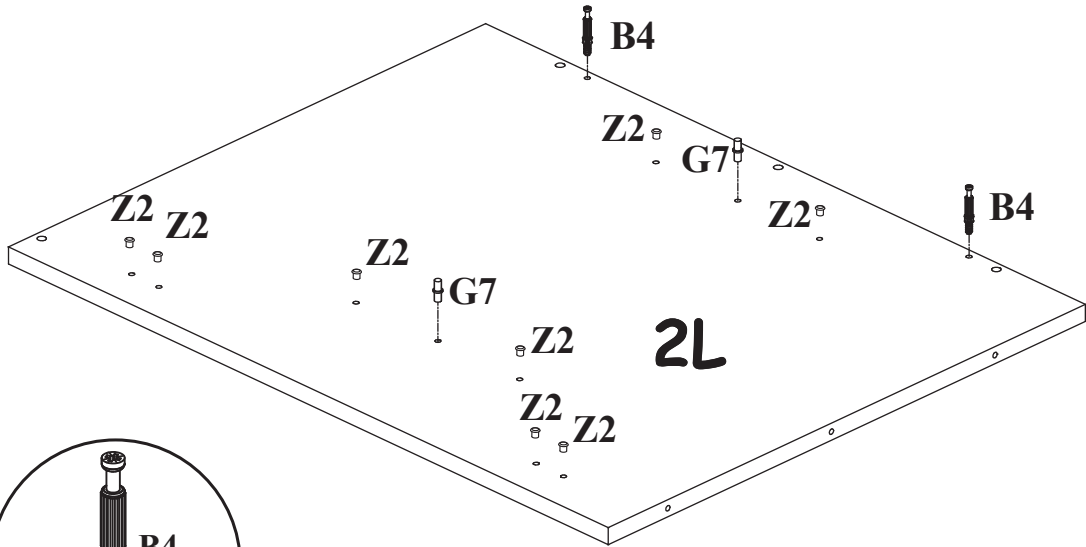


2

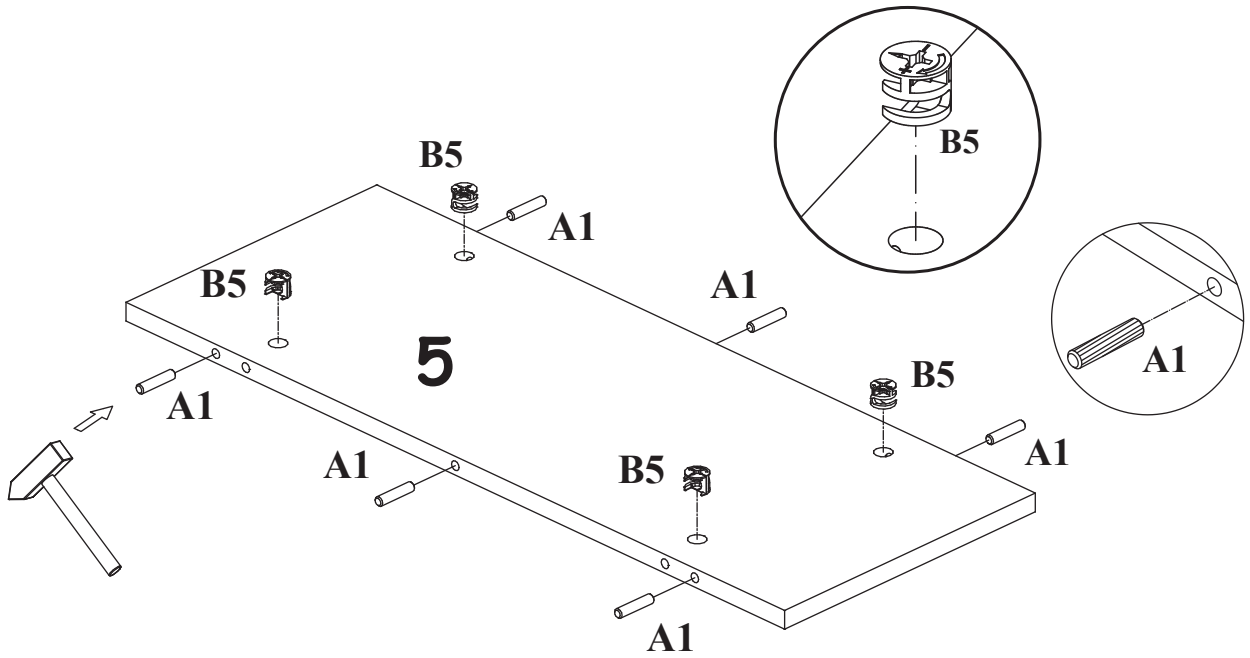





3

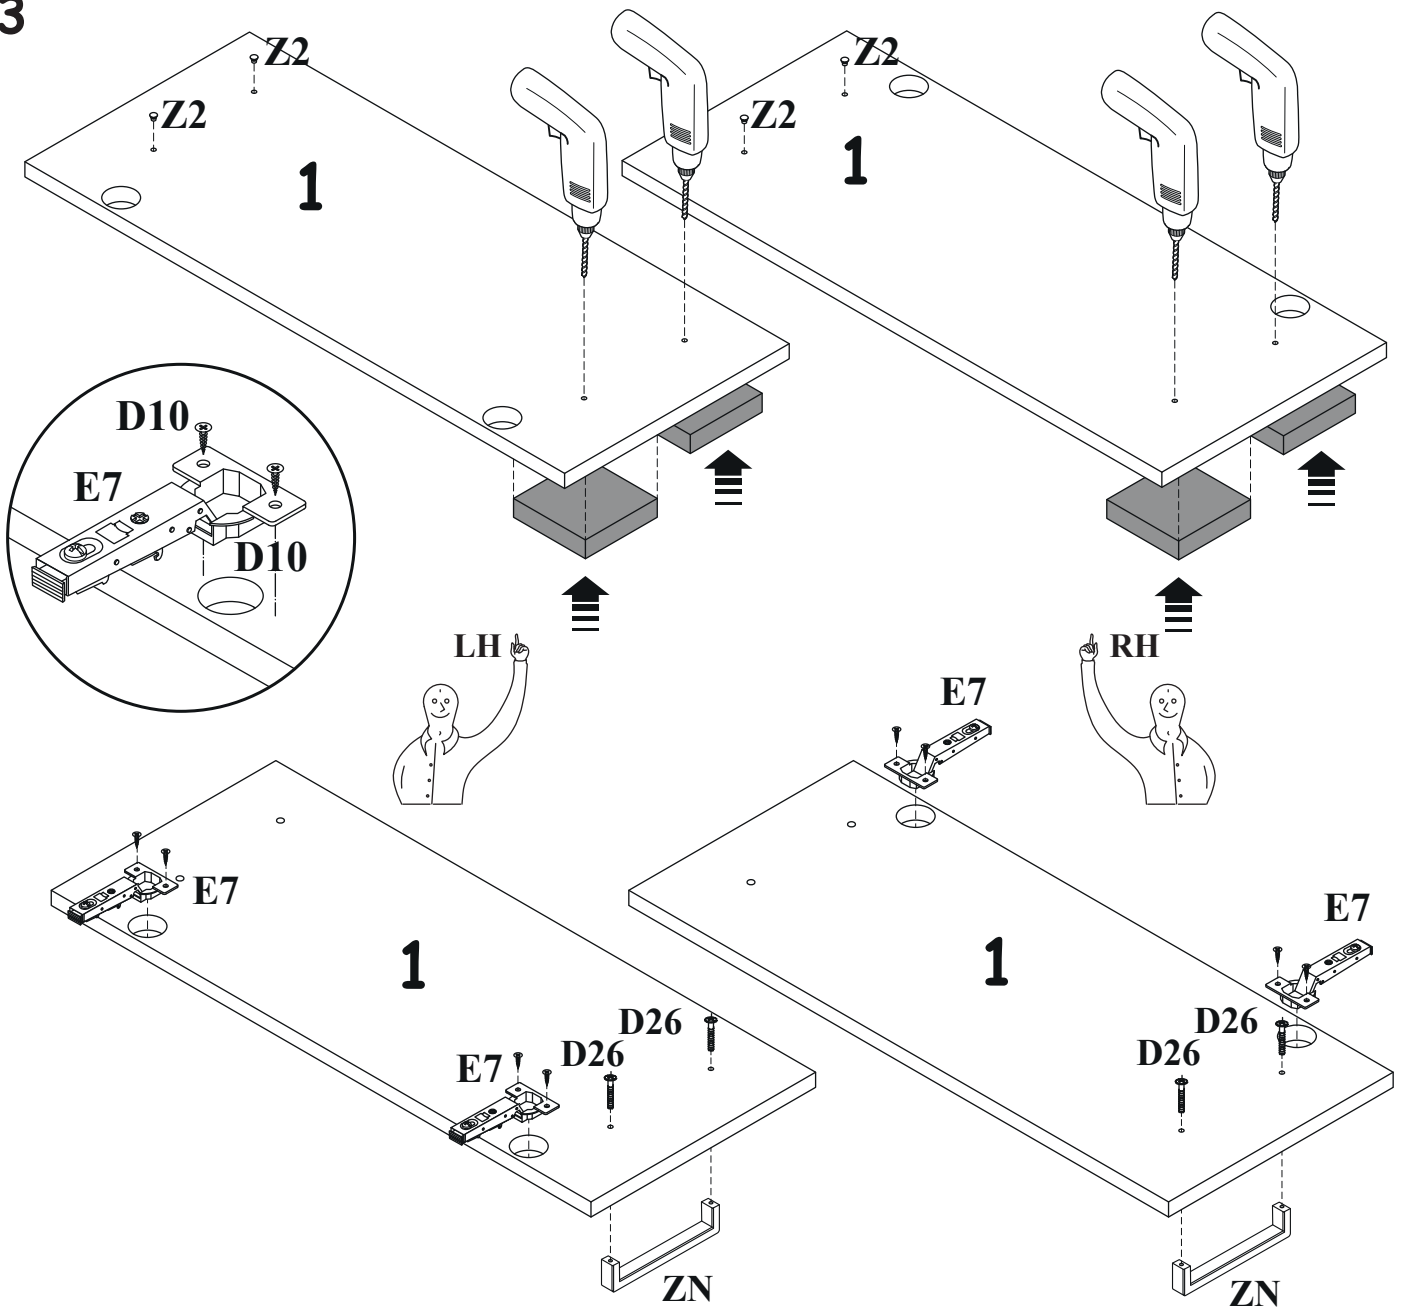



4

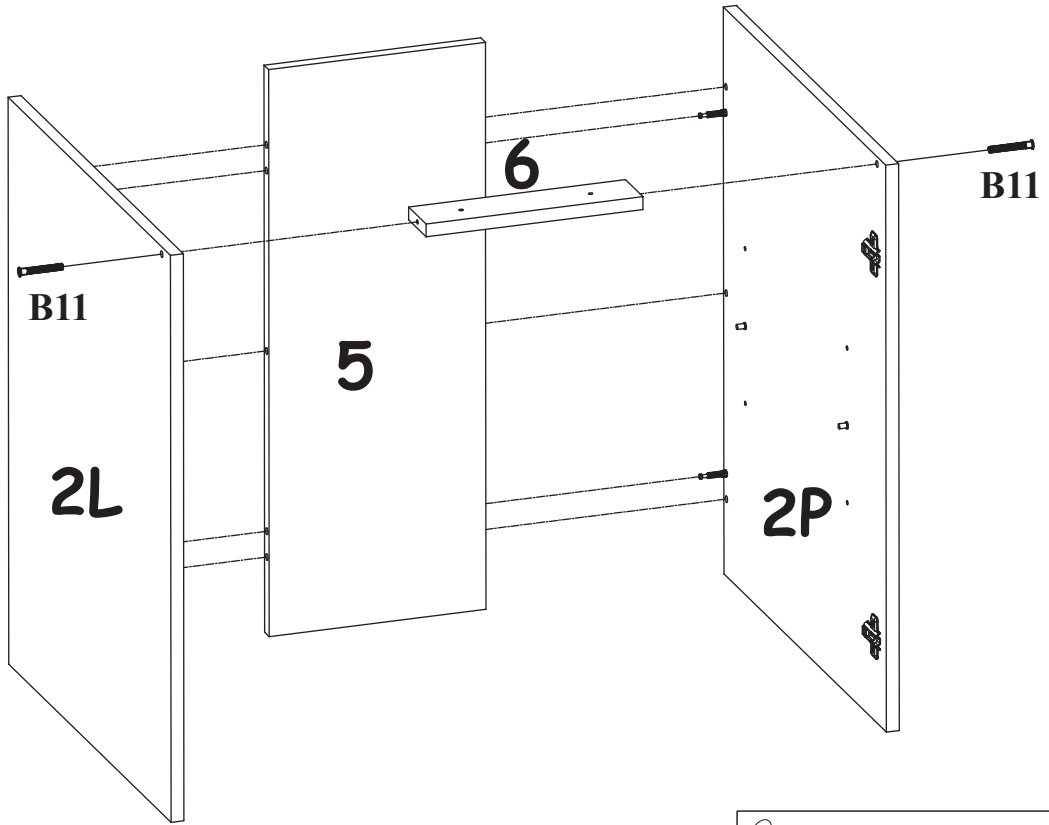






5

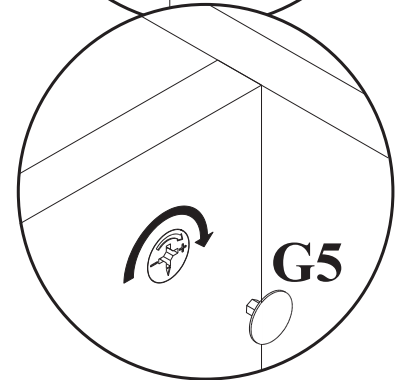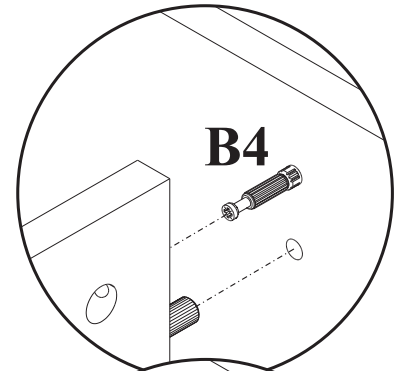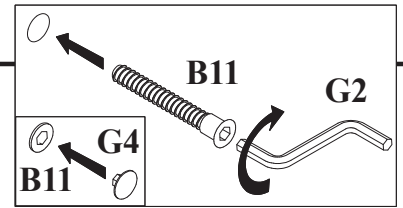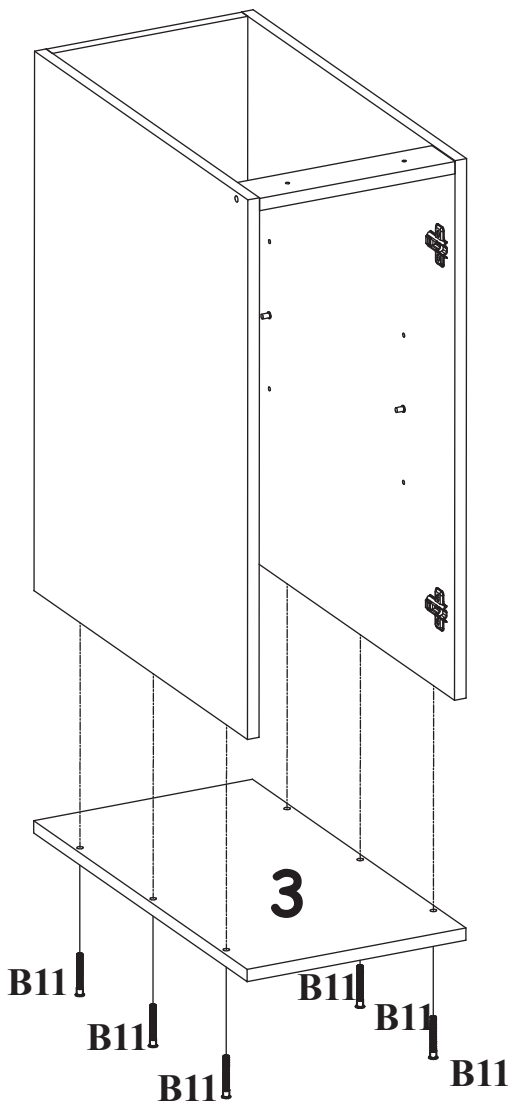

6

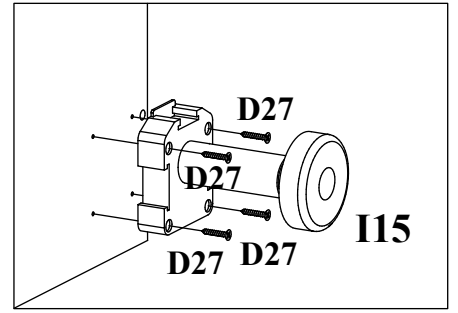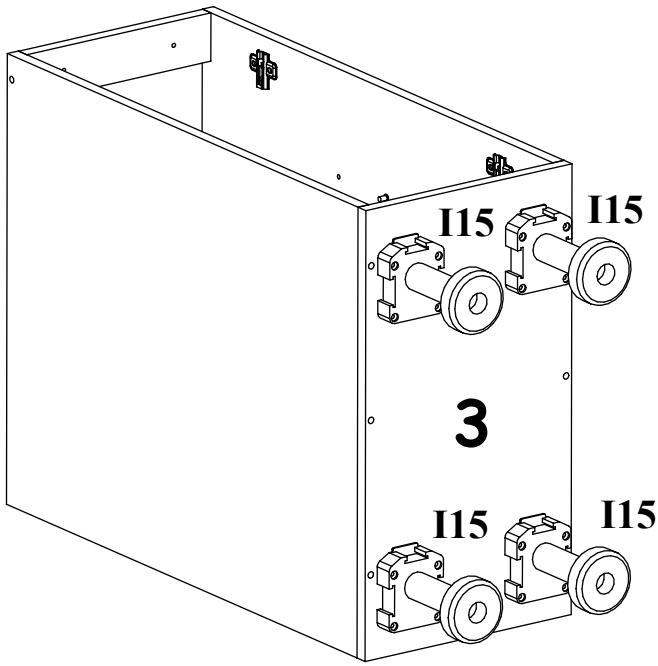

7

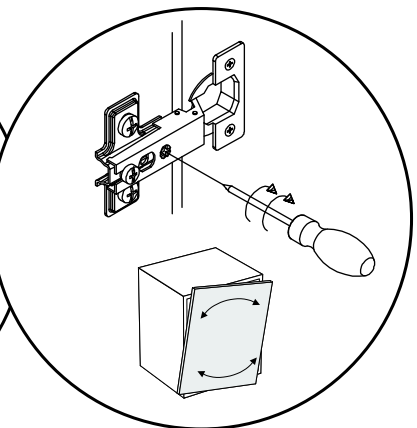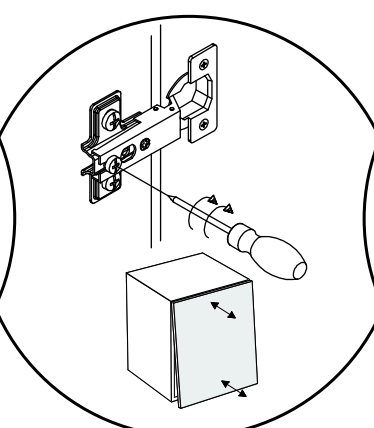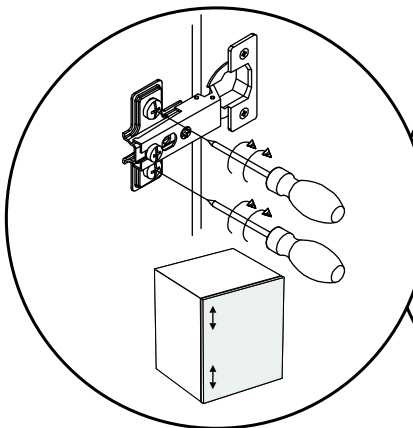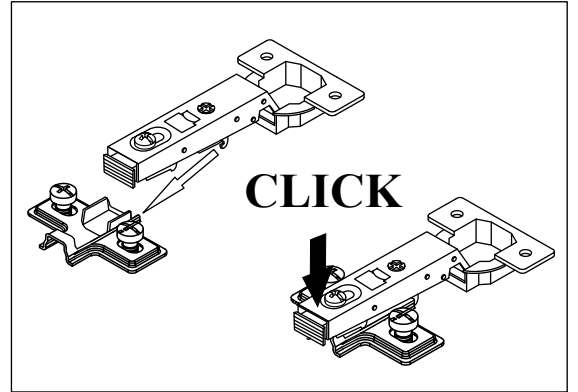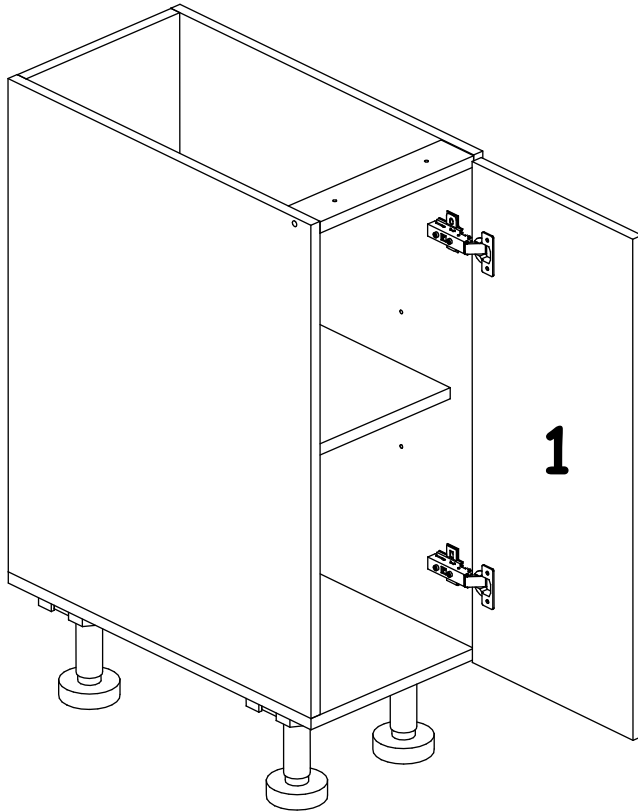

8

