




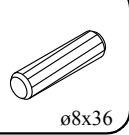




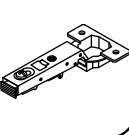
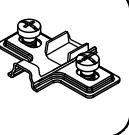






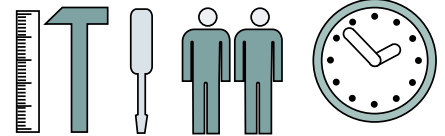













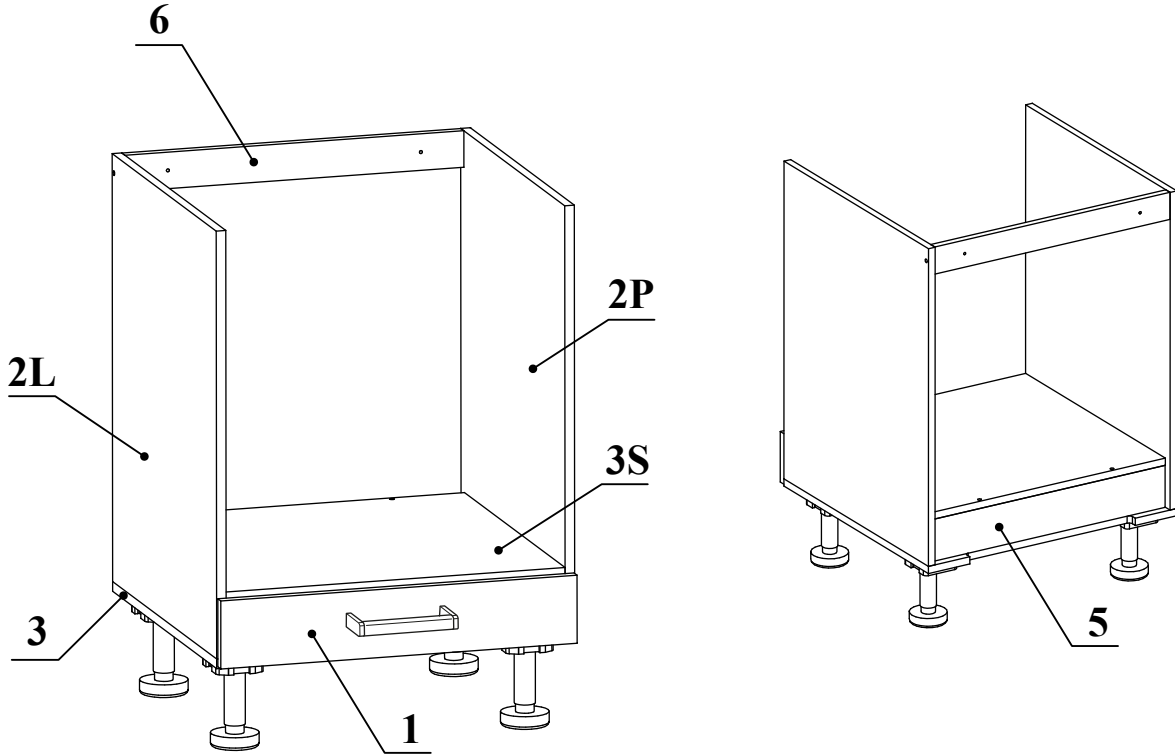


FLORENCE S60KU




60 min


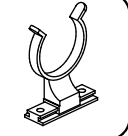
D26 X2  Ø4x22	ZN X1 	A1 X6  ø8x36	B4 X6 	B5 X6  ø15x12	G5 X6 
UP6 X4  UPØ4x30	E7 X2 	E8 X2 	B11 X12  Ø7x50	G4 X12 	D10 X4  USØ3,5x13
G2 X1 	D27 X16  USØ4x35	I15 X4  L-150 mm	I16 X2 	D30 X12  USØ3,5x16	KM1 X6 

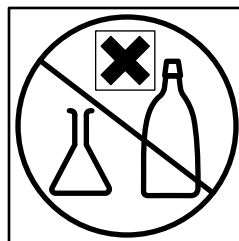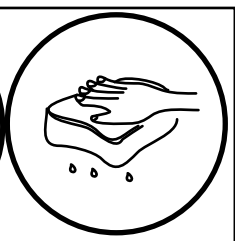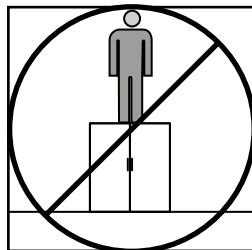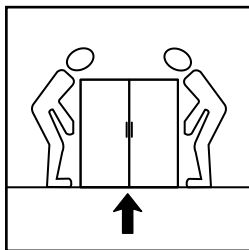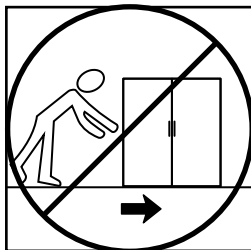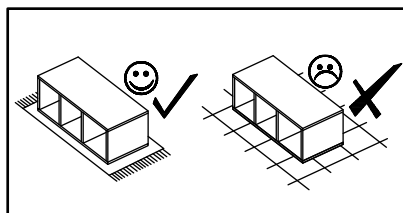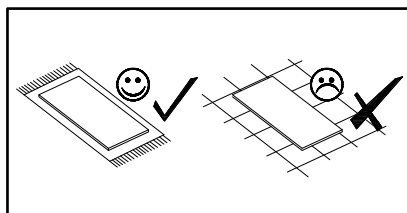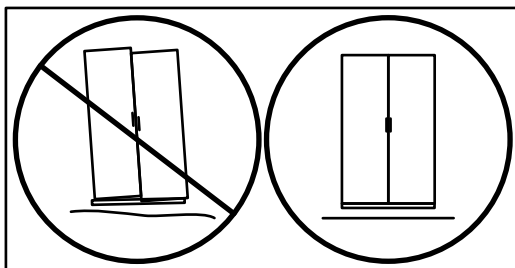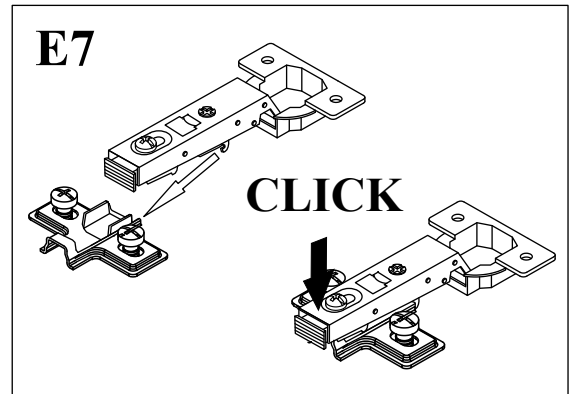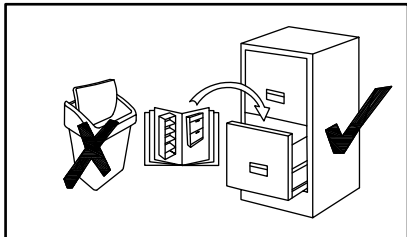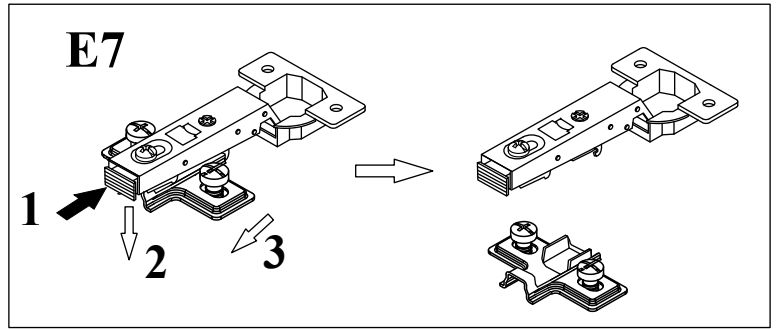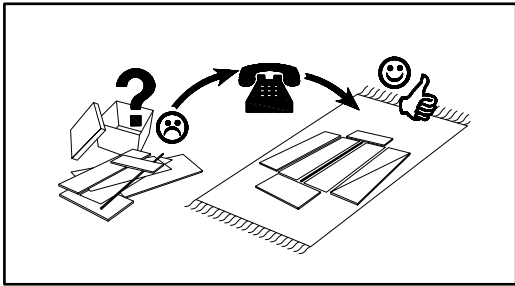


1

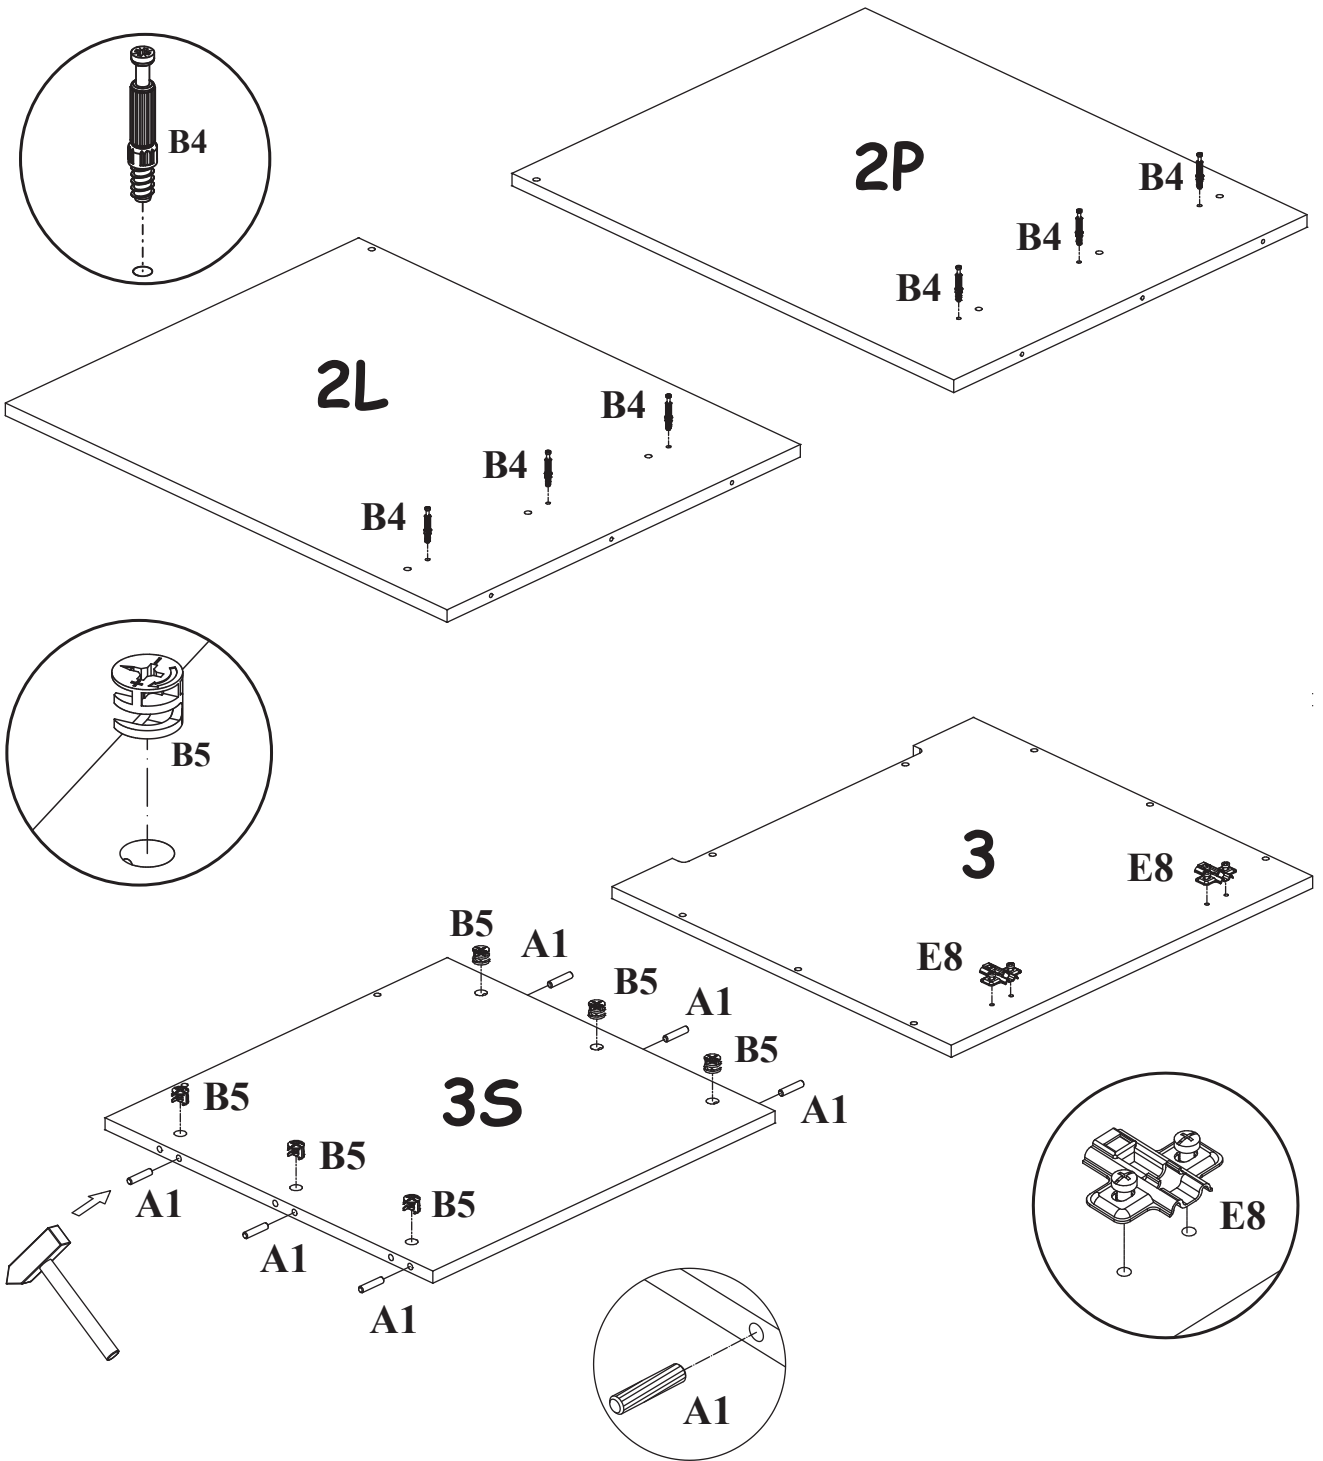




2

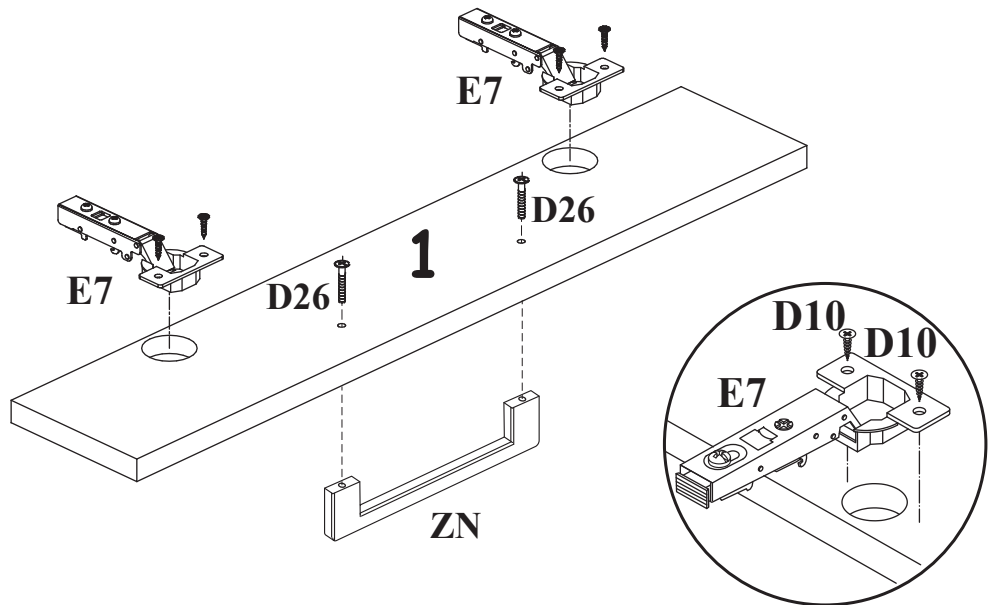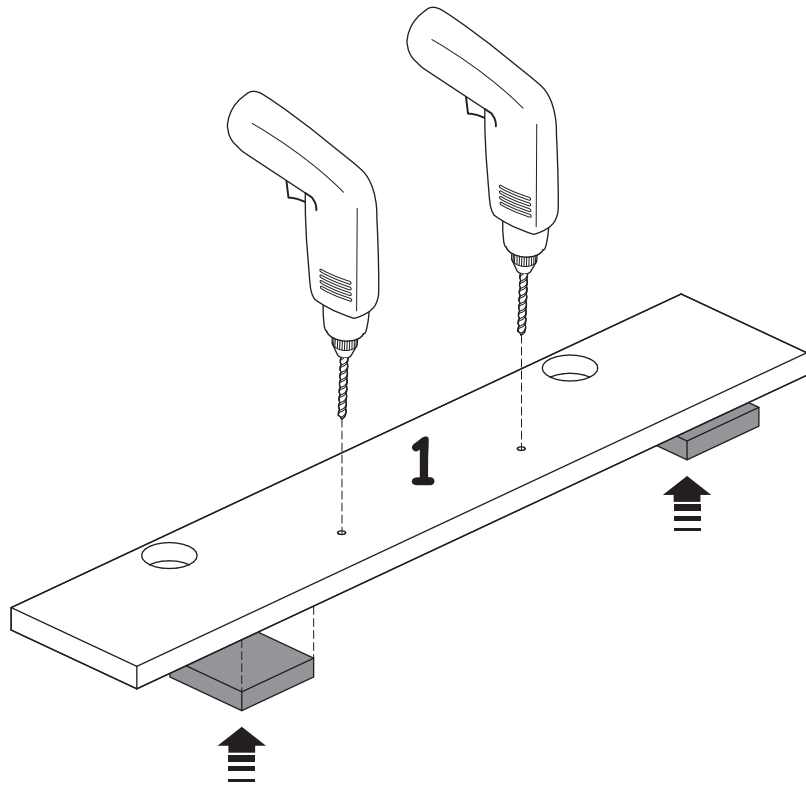



3

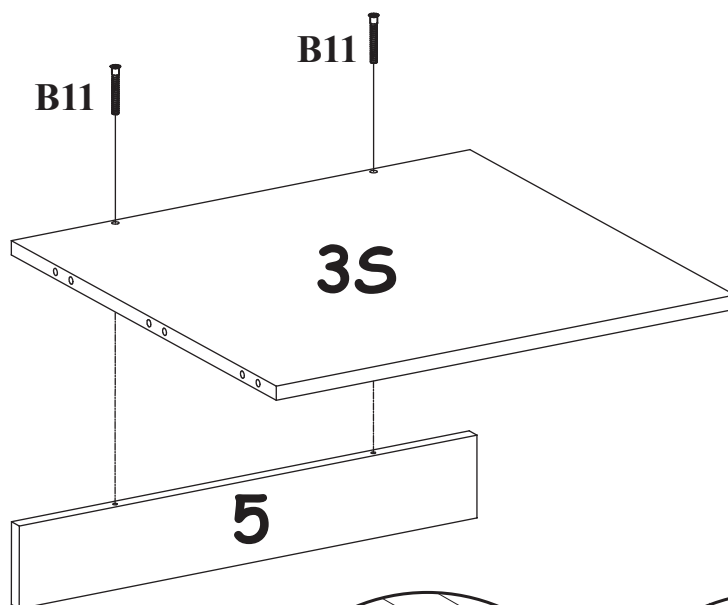



4

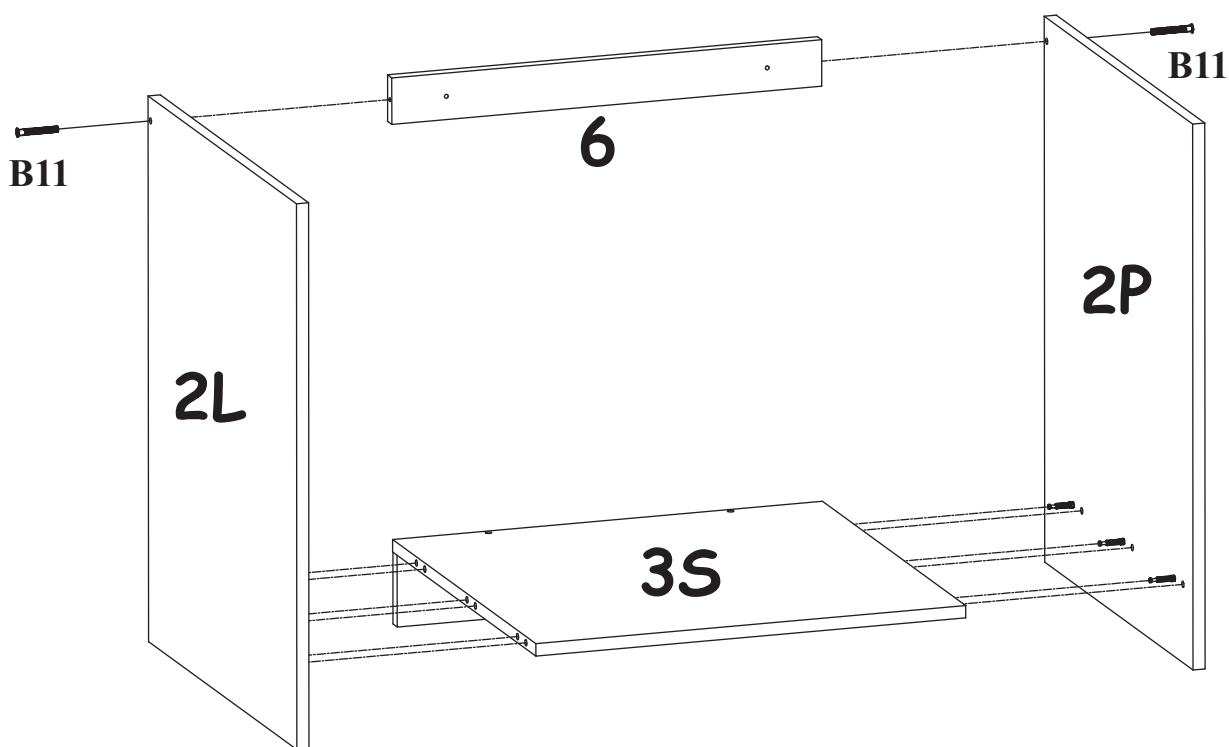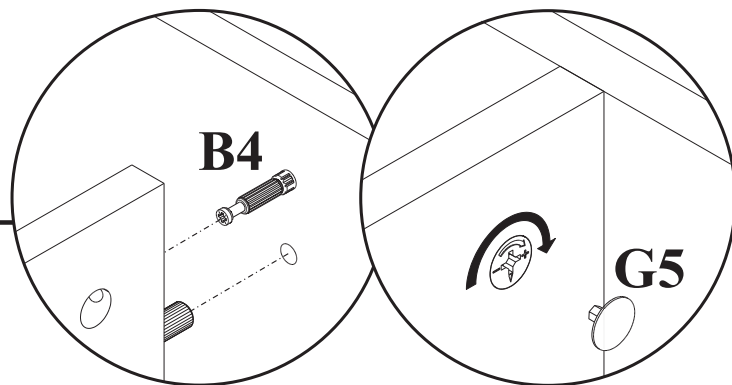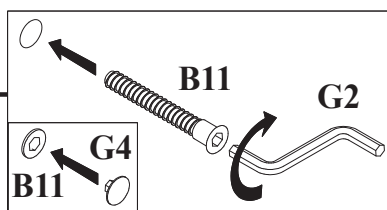



5

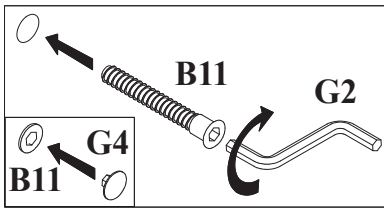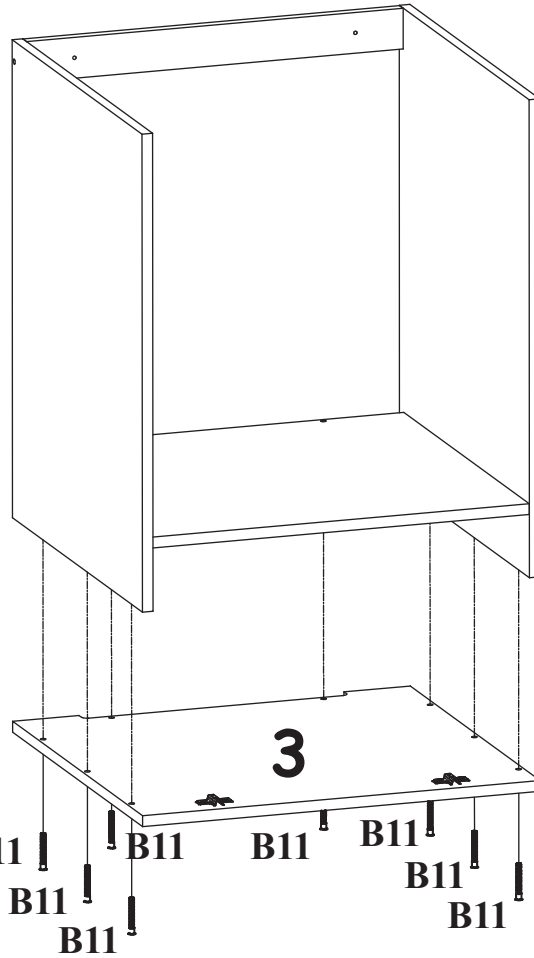

6

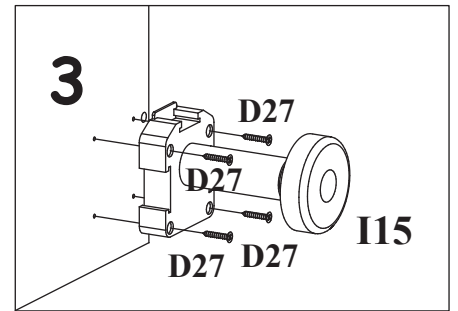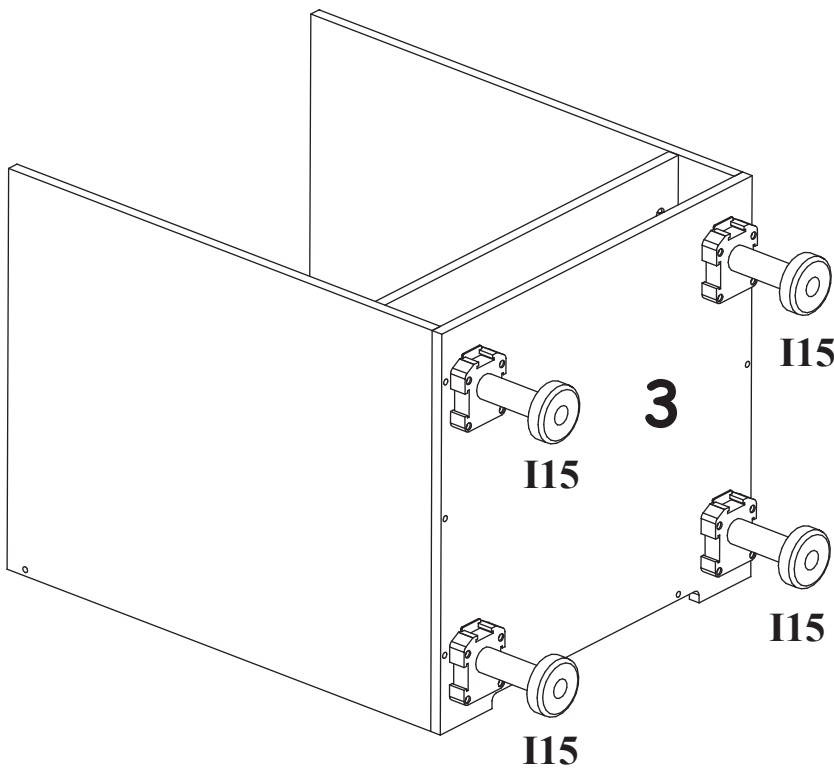

7

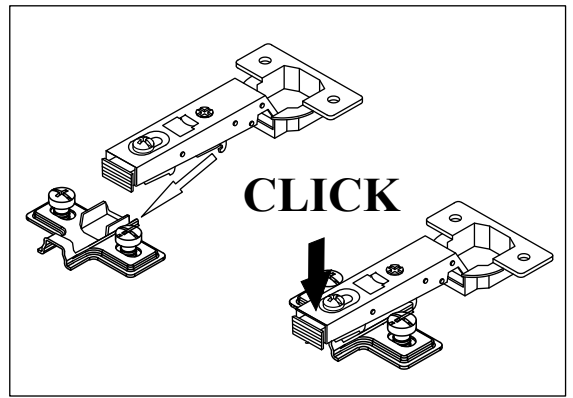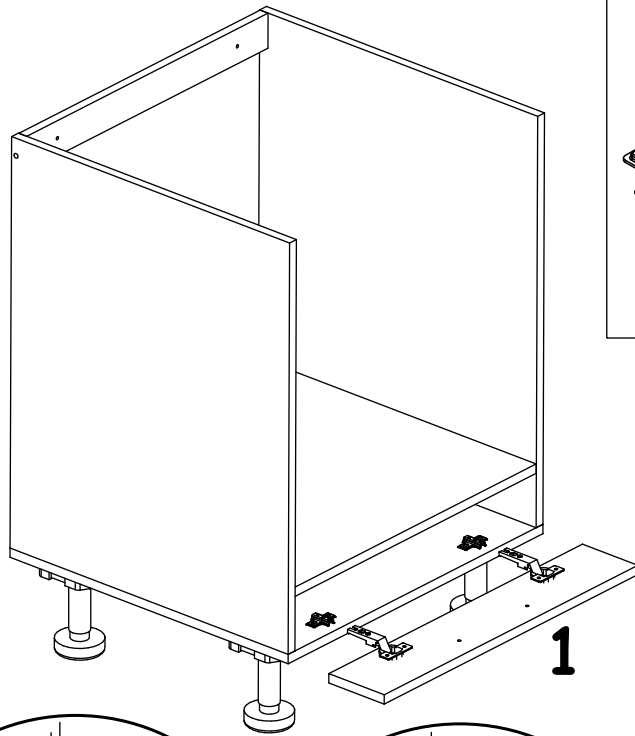

8

