

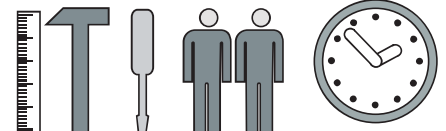

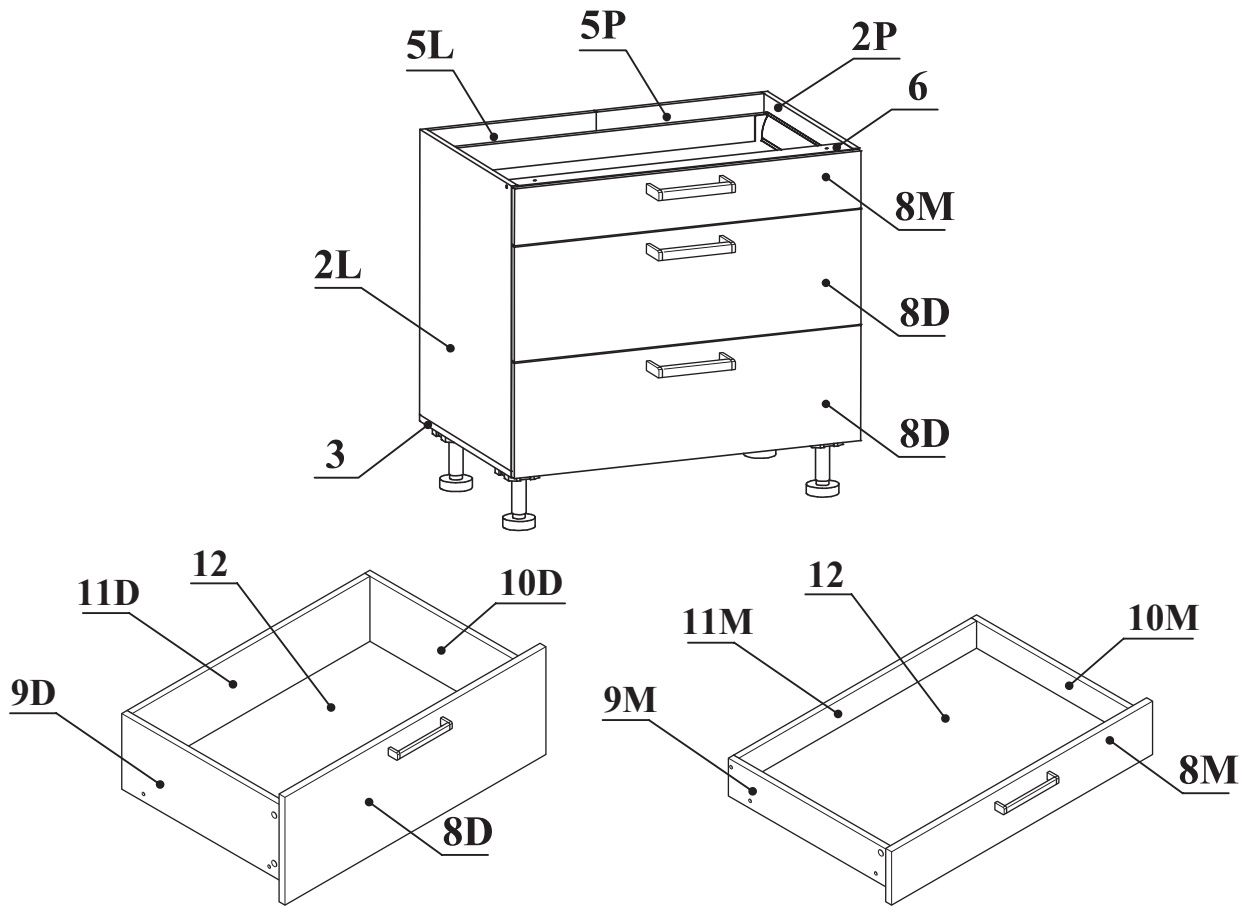



FLORENCE S80SZ3A





90 min


KM1	
X2	


A1	
X27	ø8x36


B4	
X17	


B5	
X21	ø15x12


G5	
X21	


D30	
X8	USØ3,5x16


UP6	
X4	UPØ4x30


B9	
X2	Ø7x48


D14	
X12	ESØ6,3x13


B11	
X35	Ø7x50


G4	
X35	


D10	
X12	USØ3,5x13


G2	
X1	


AM	
X3	











D26	
X6	Ø4x22

ZN	
X3	



I15	
X4	L-150 mm

I16	
X2	


D27	
X16	USØ4x35

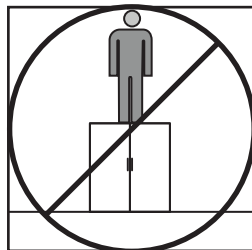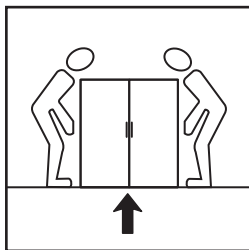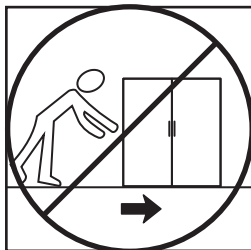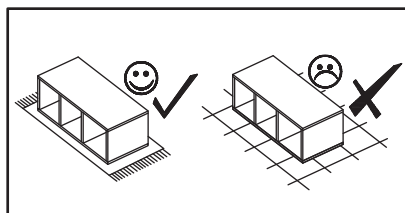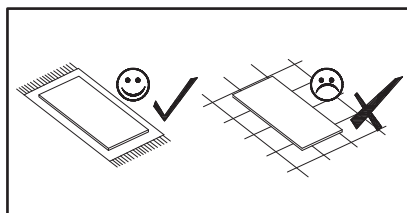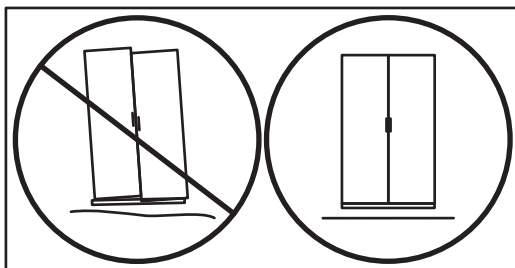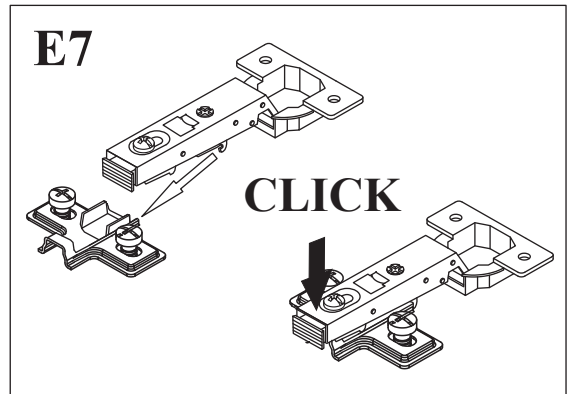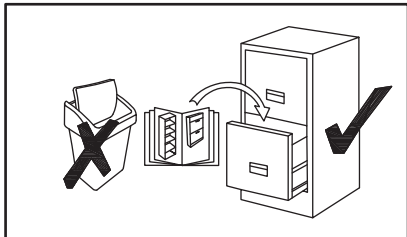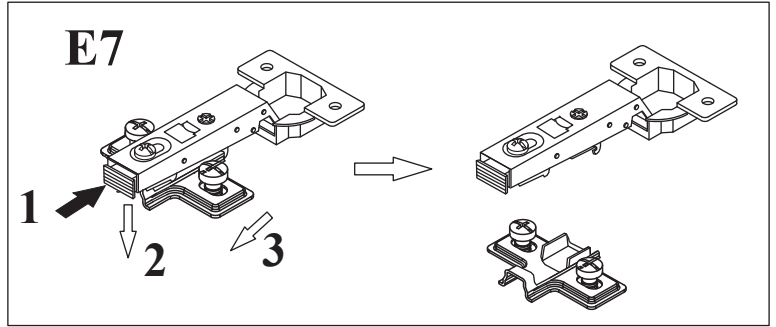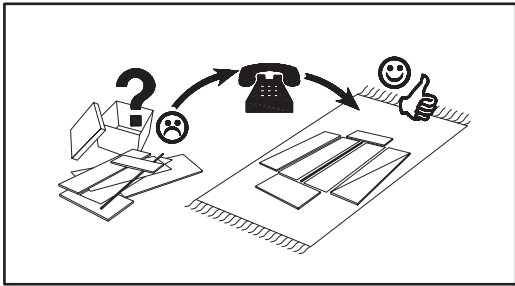


1

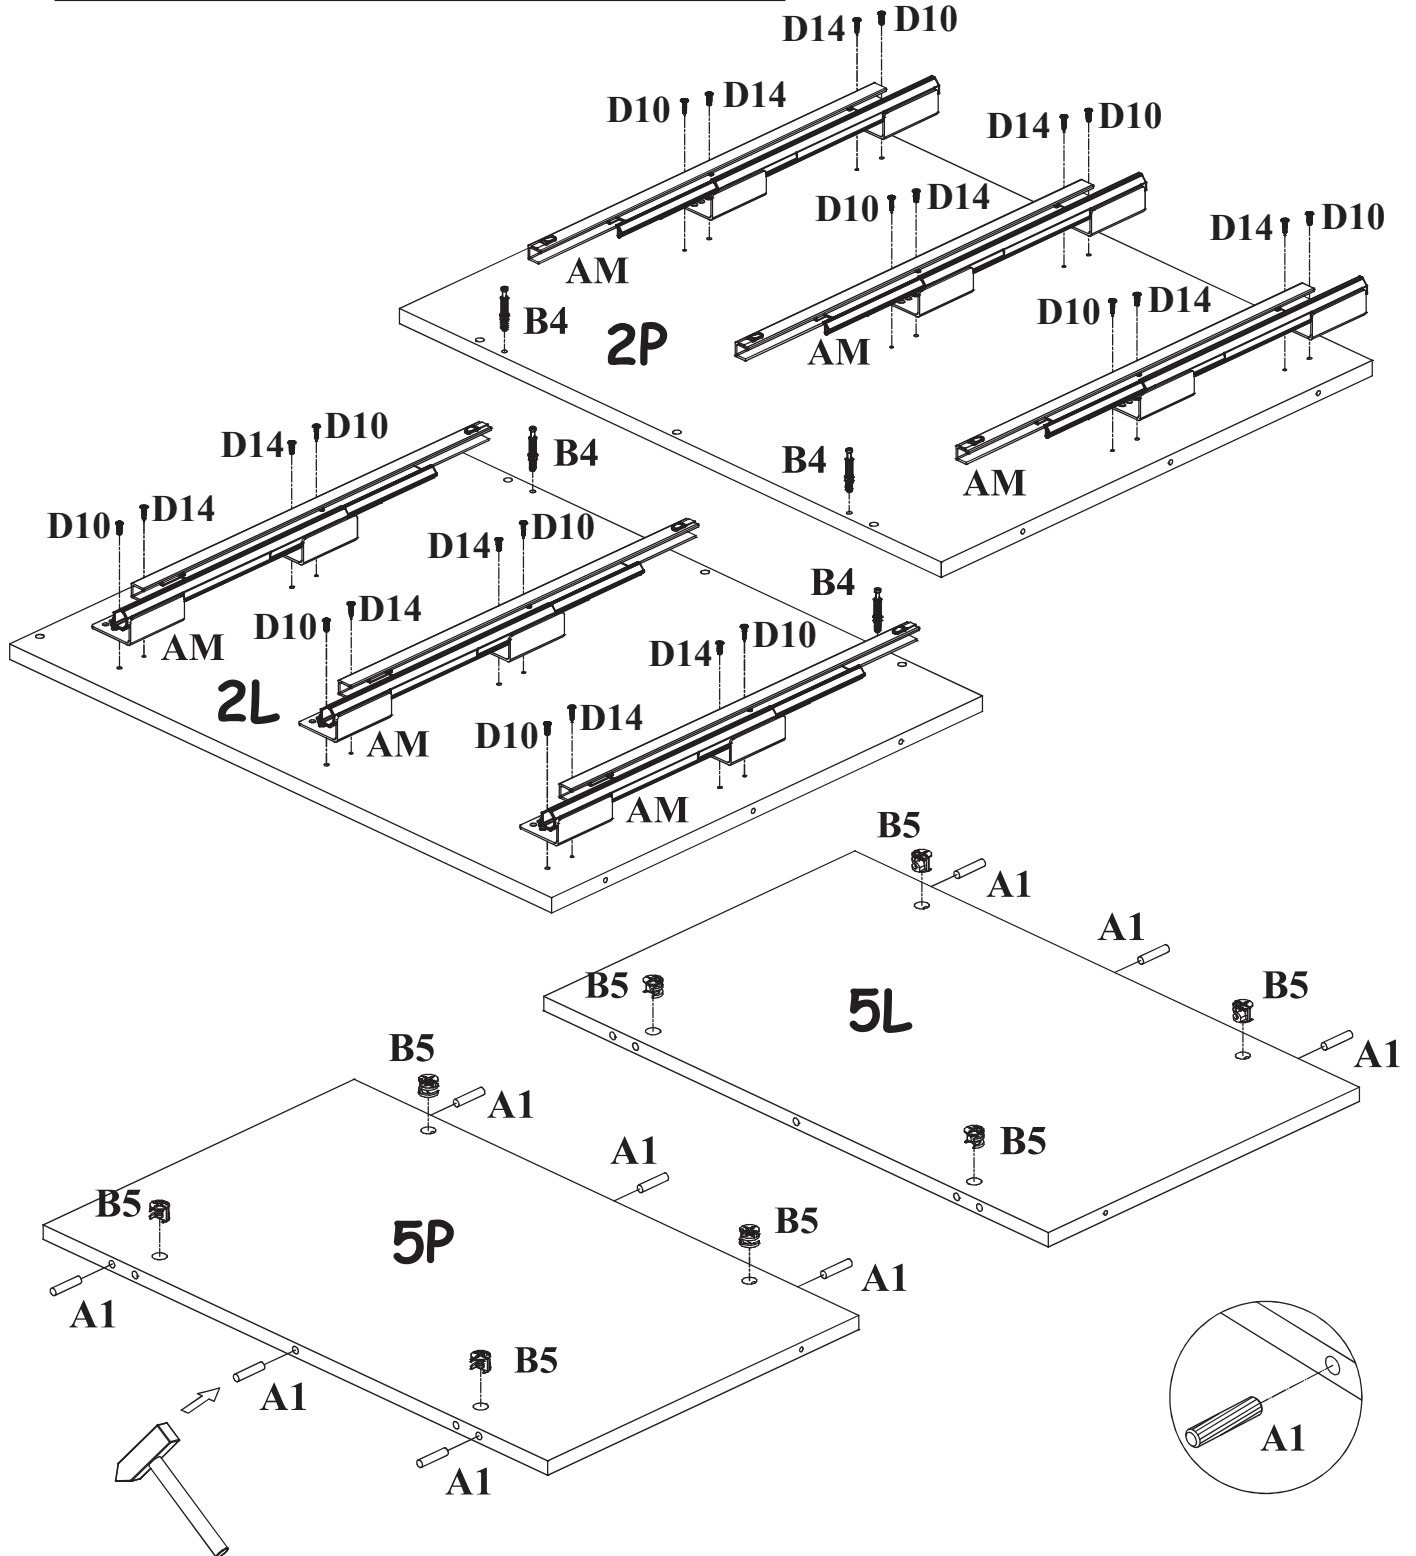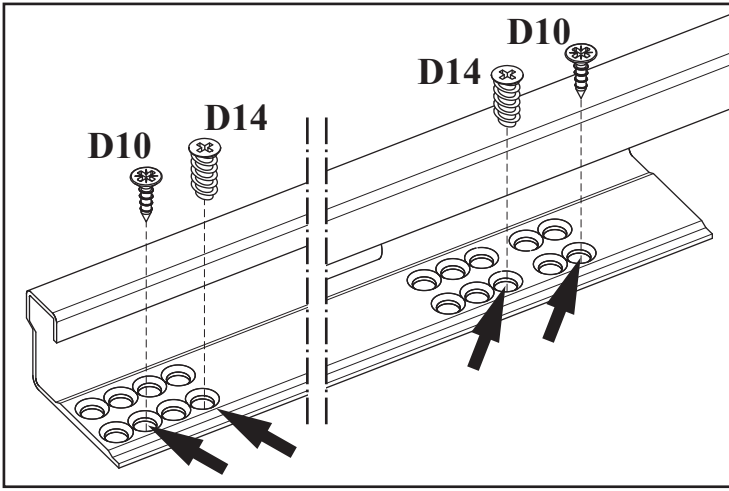


2

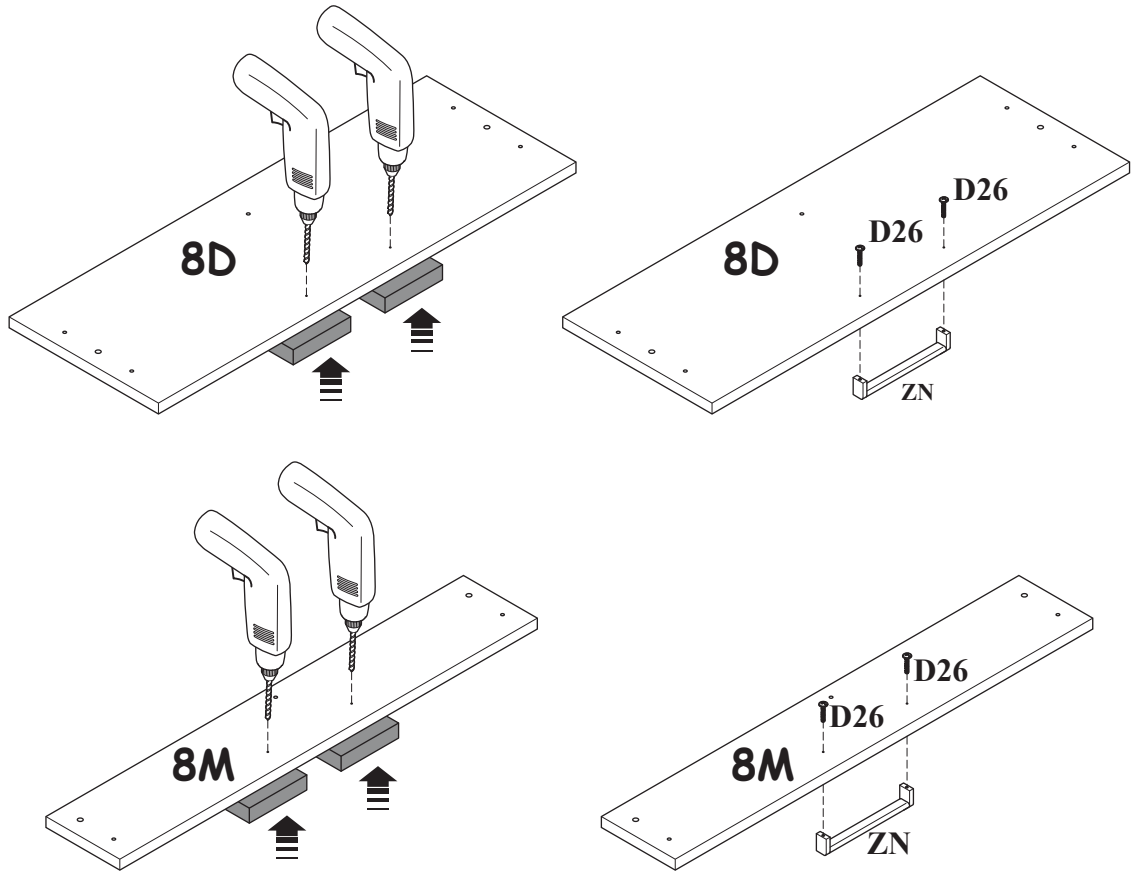


3

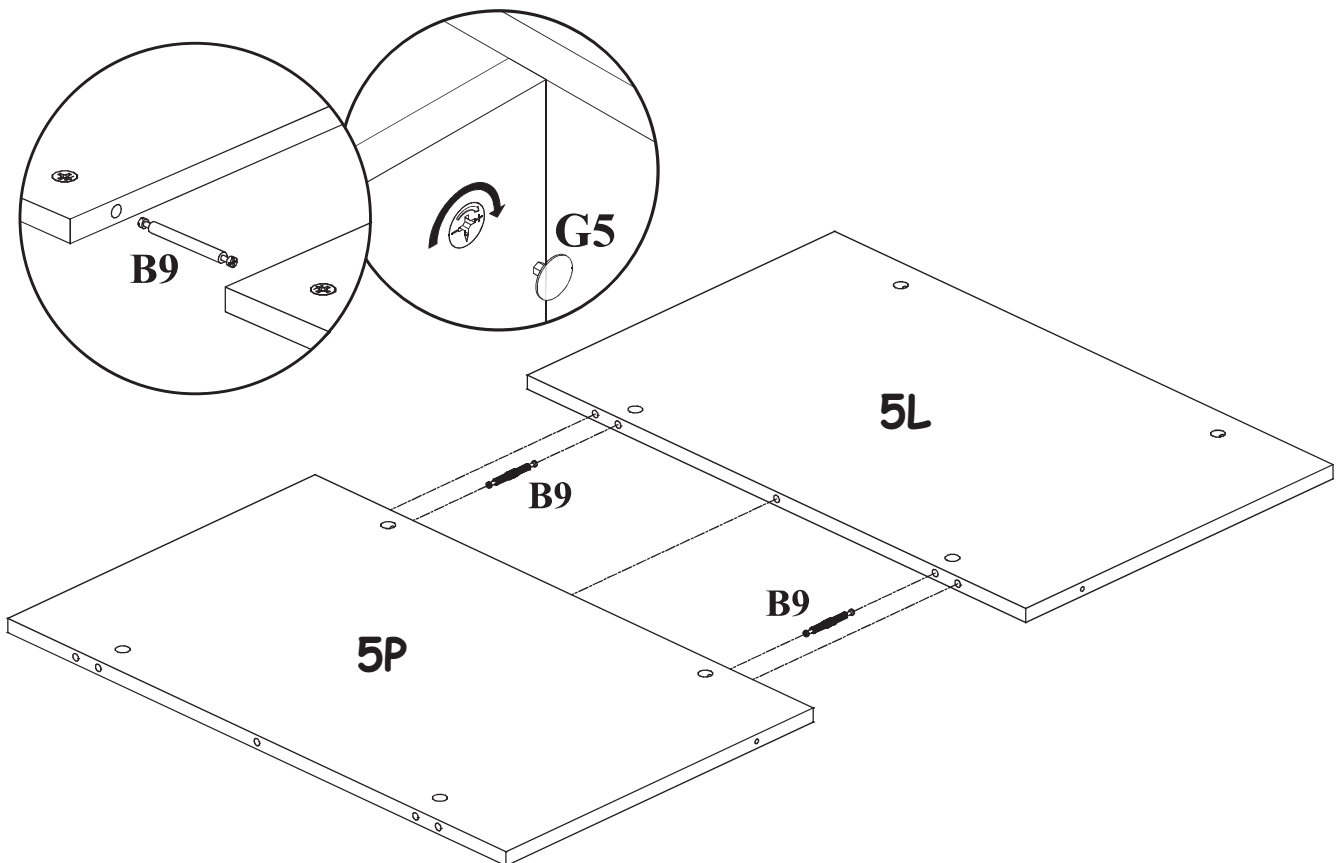




4

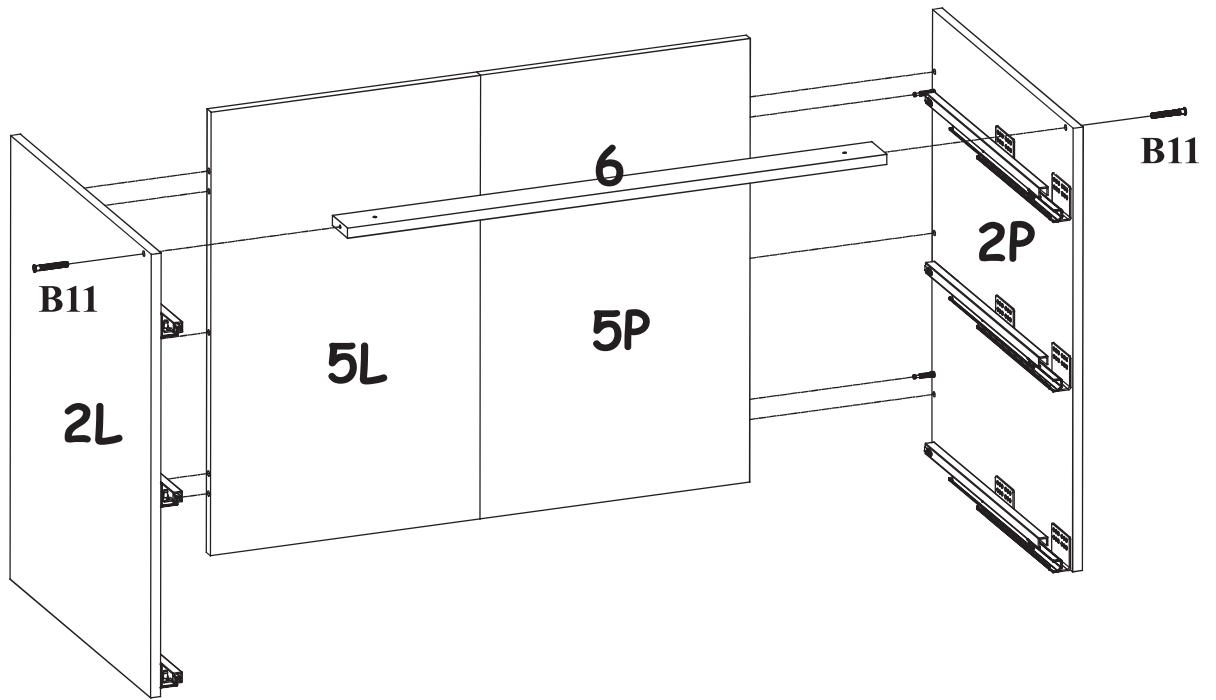


5

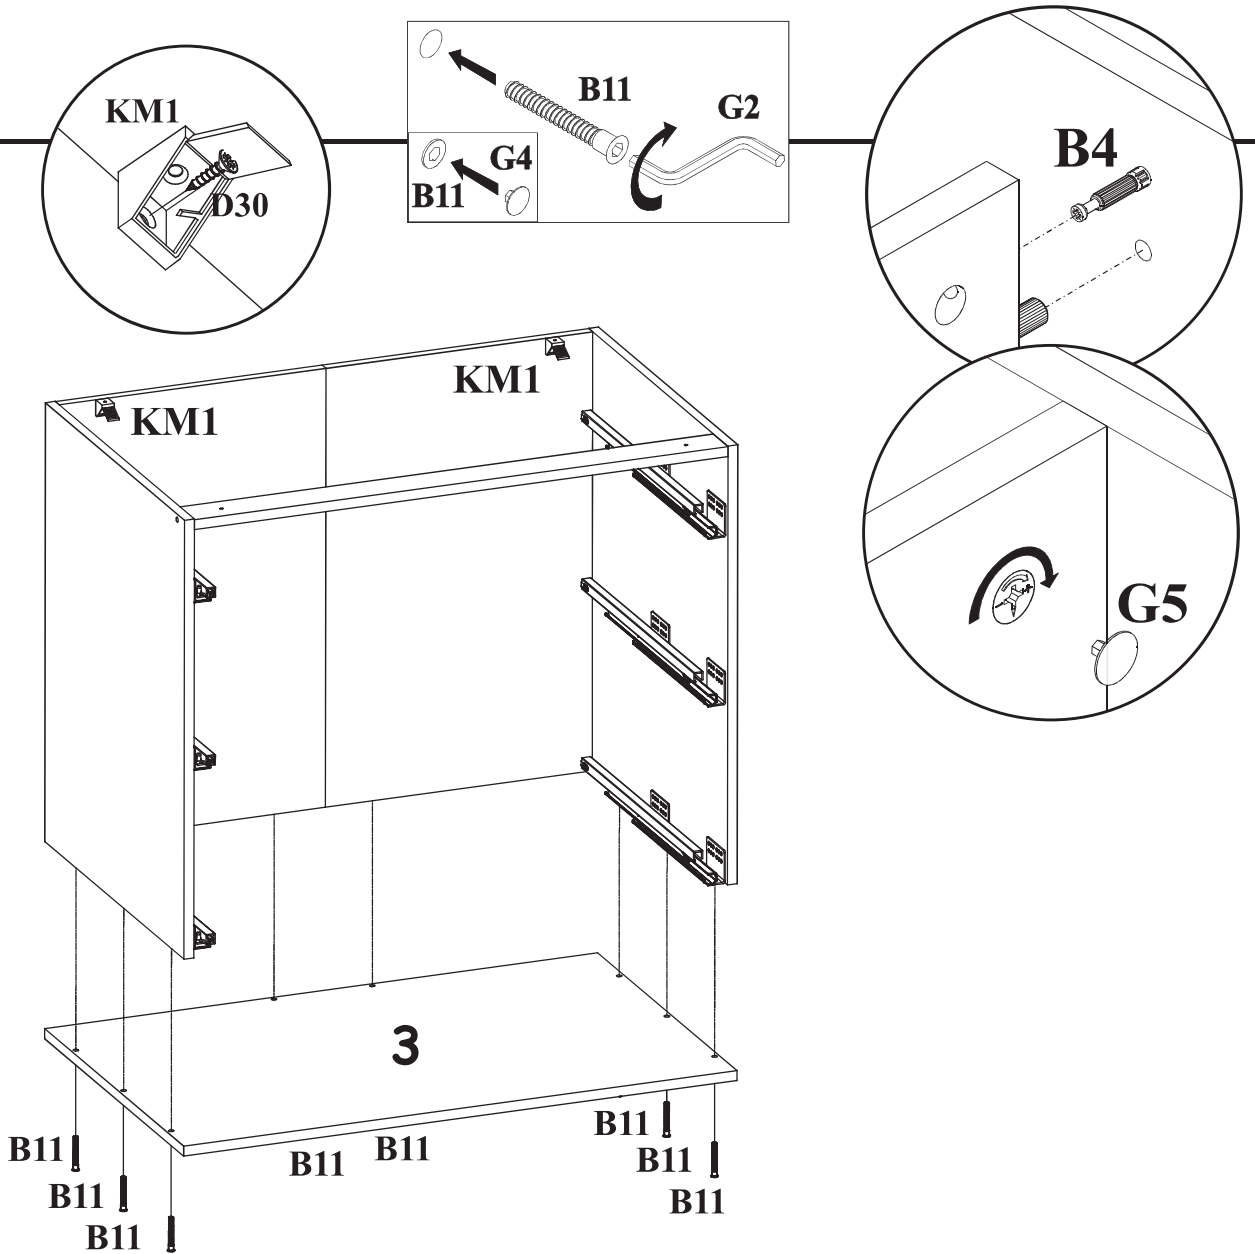

6

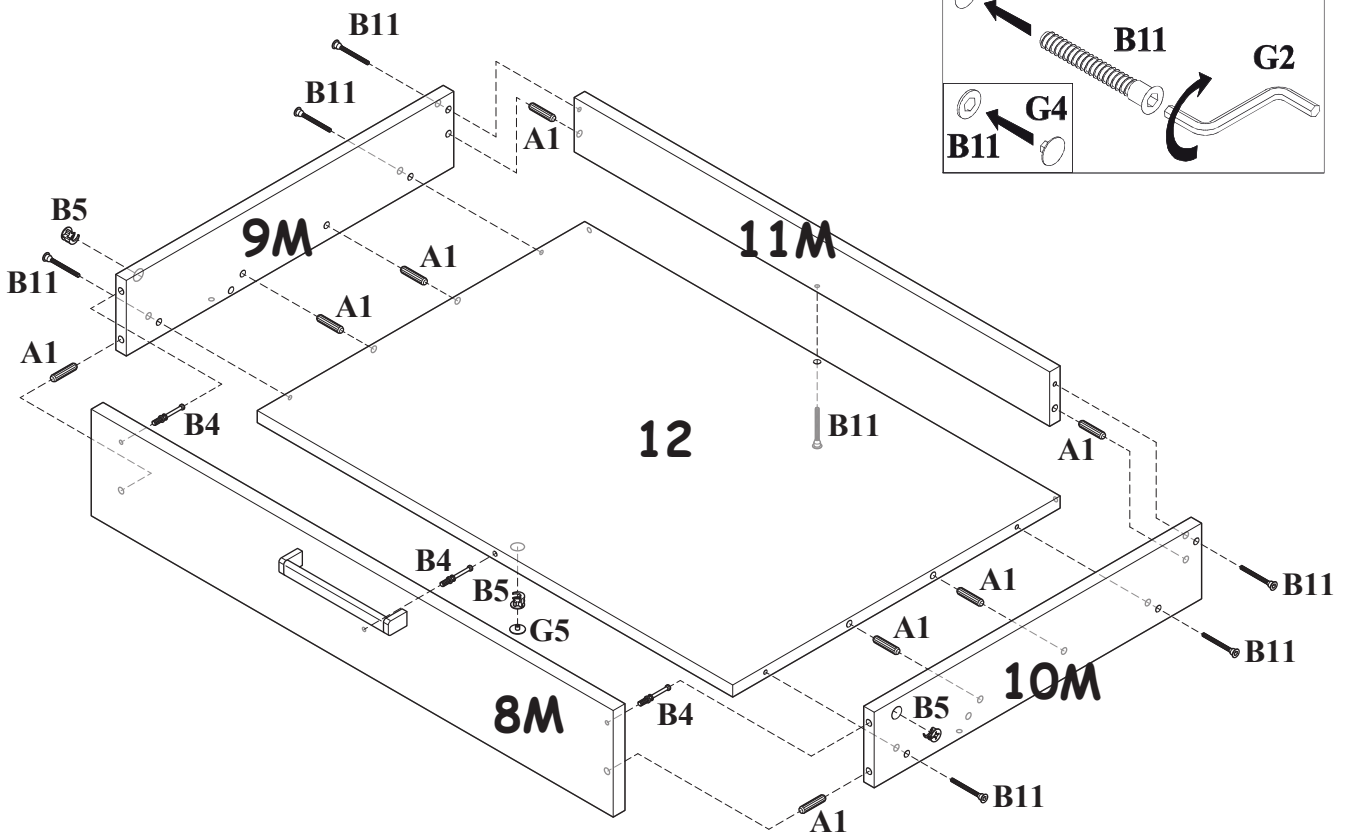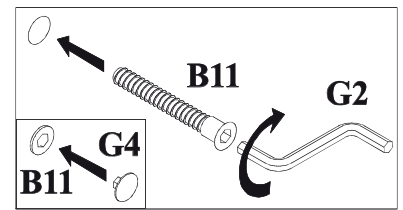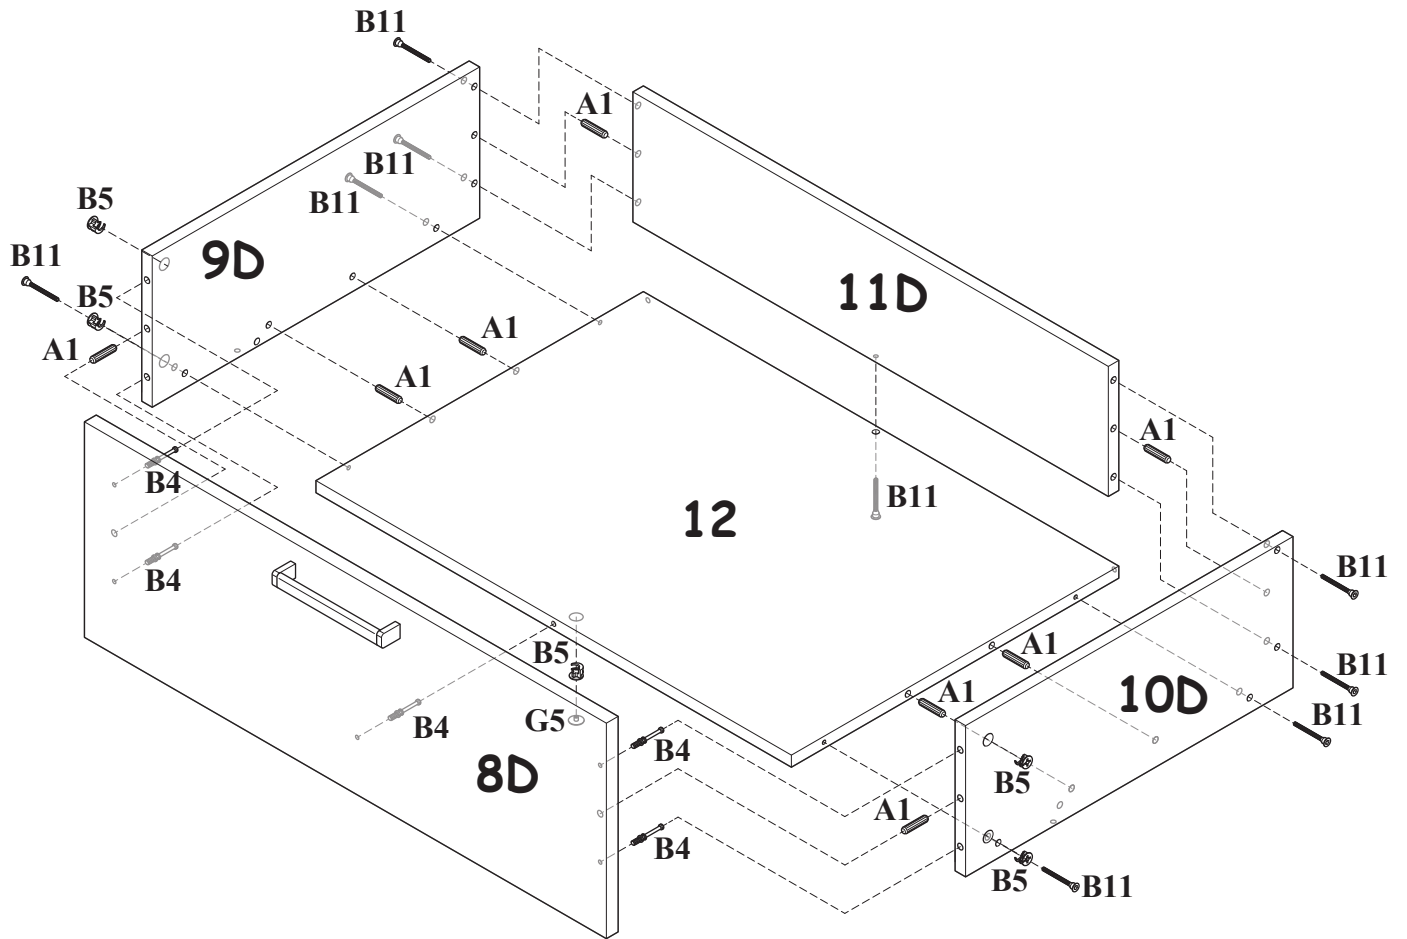

7

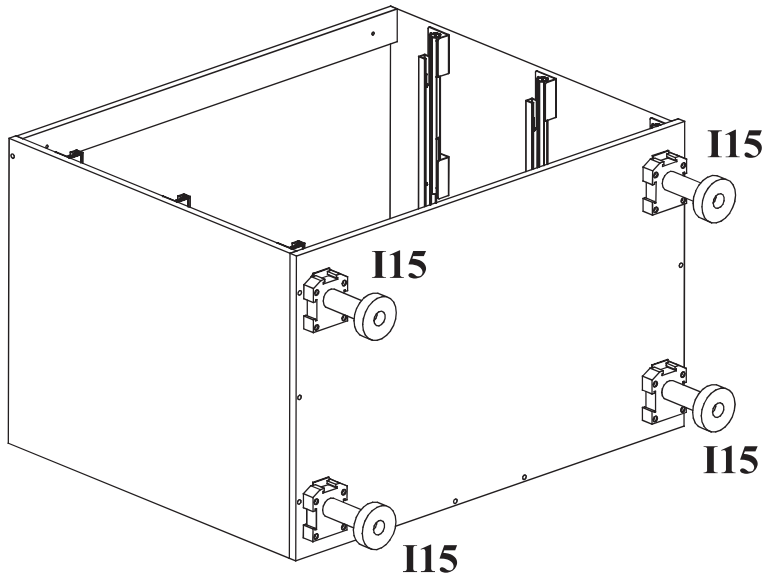

8

