

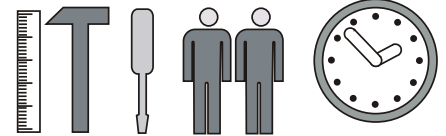

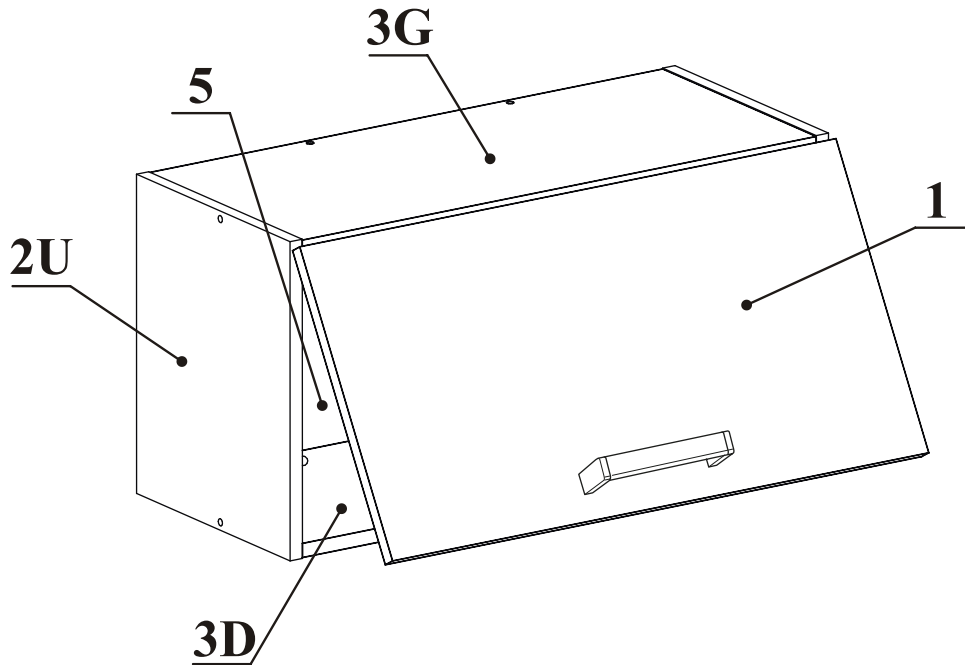














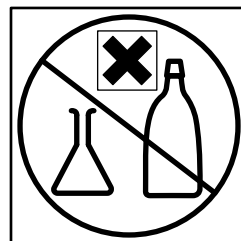
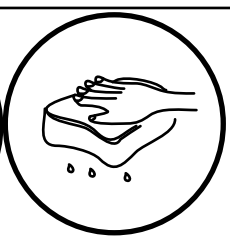
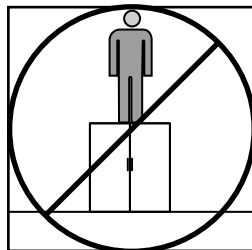
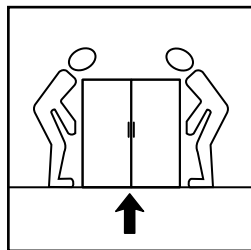
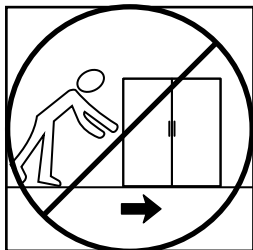
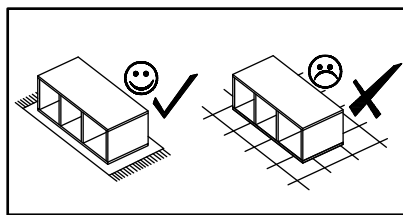
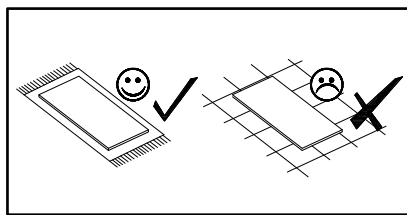
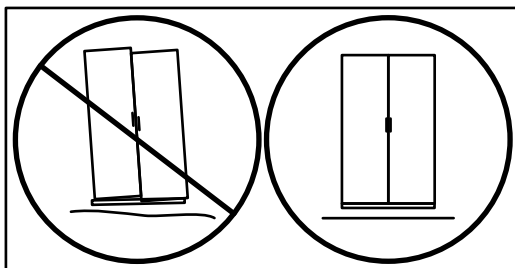
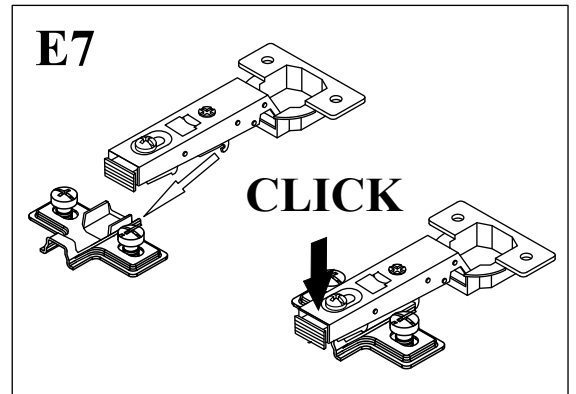
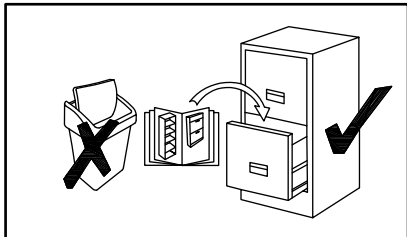
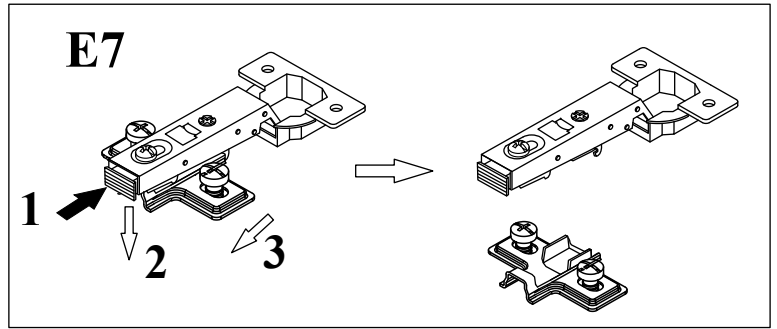
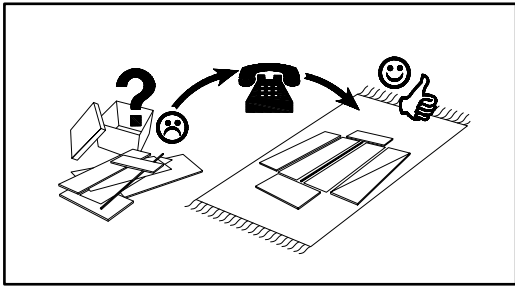


FLORENCE W70/36/G




40 min


A1 X12  ø8x36	B4 X2 	B5 X2  ø15x12	G5 X2 	BP1 X2 	D30 X14  USØ3,5x16
E7 X2 	E8 X2 	B11 X8  Ø7x50	G4 X8 	D10 X4  USØ3,5x13	G2 X1 
AR1 X2 	AR2 X2 	D26 X2  Ø4x22	ZN X1 		








1

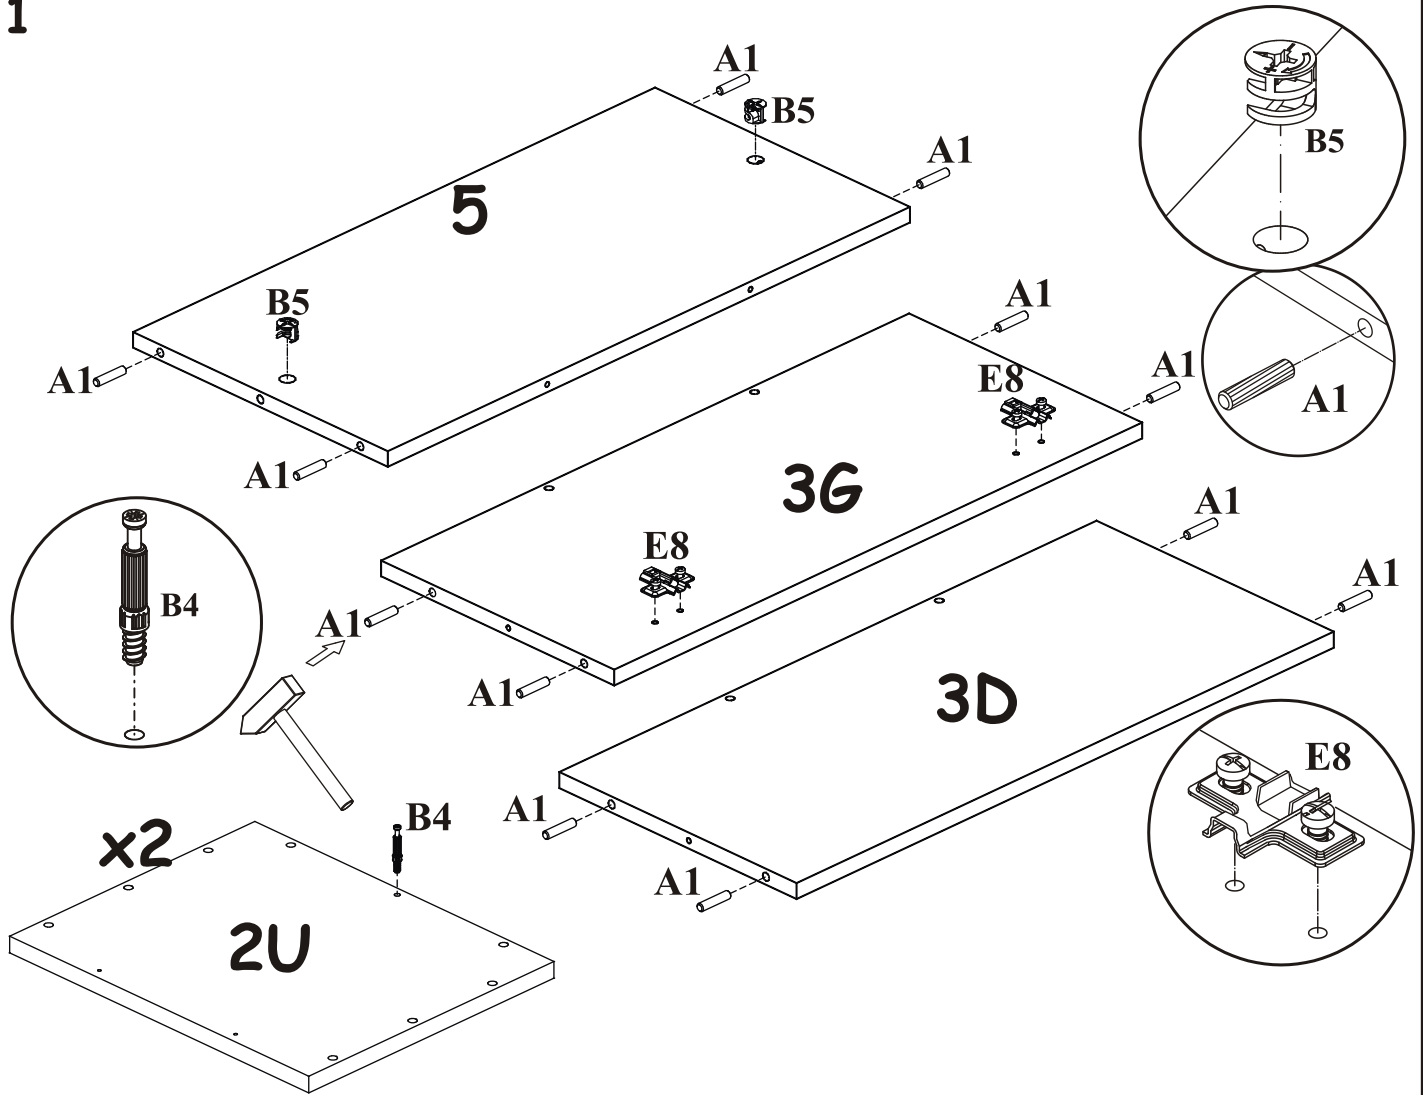




2

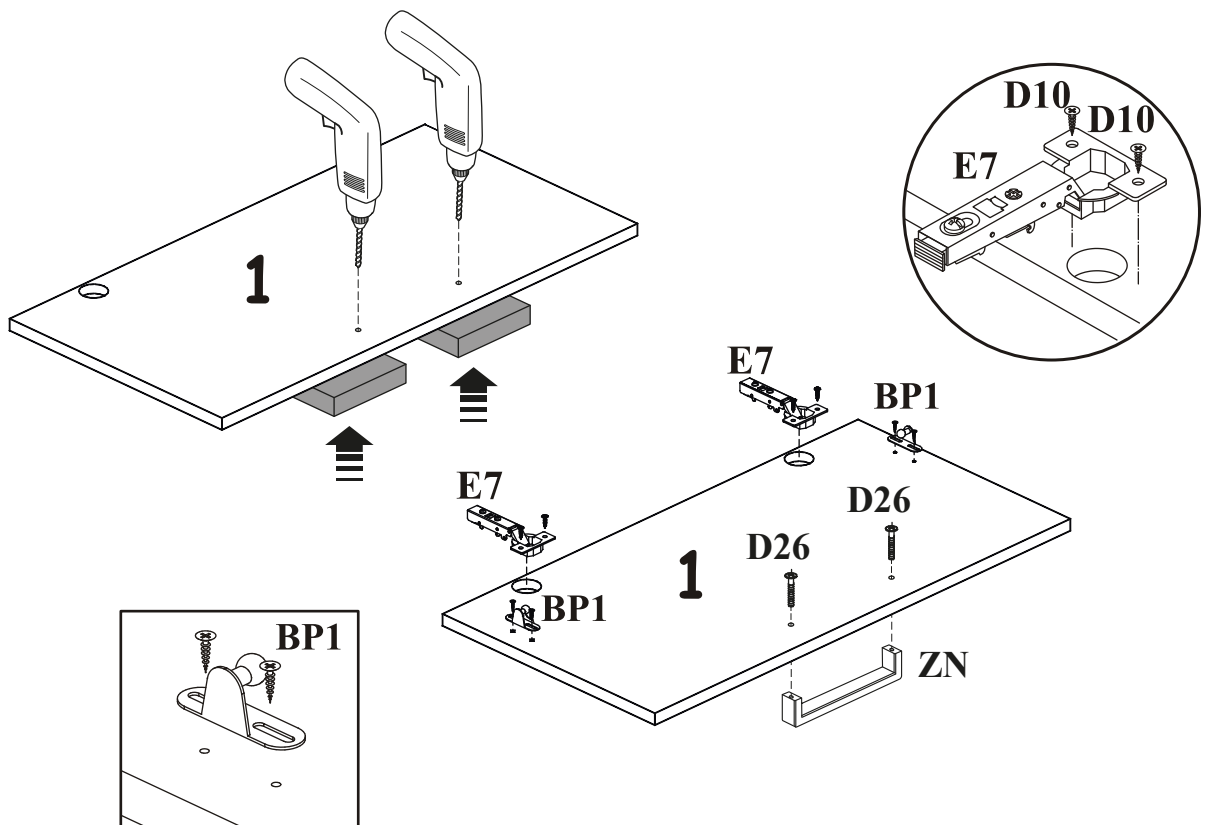

3

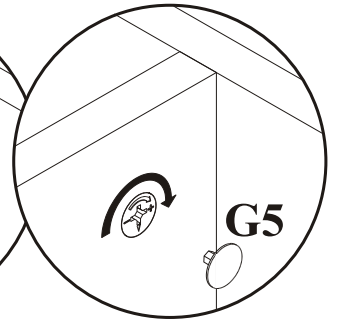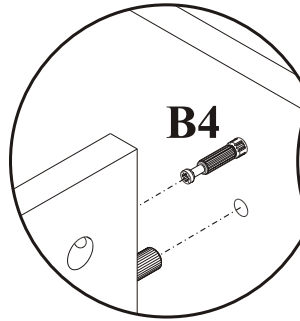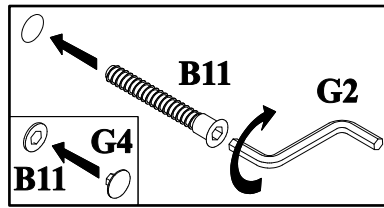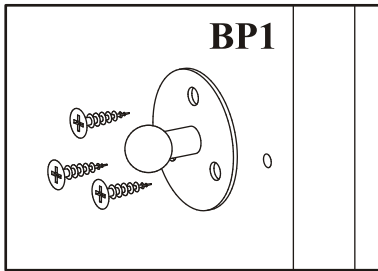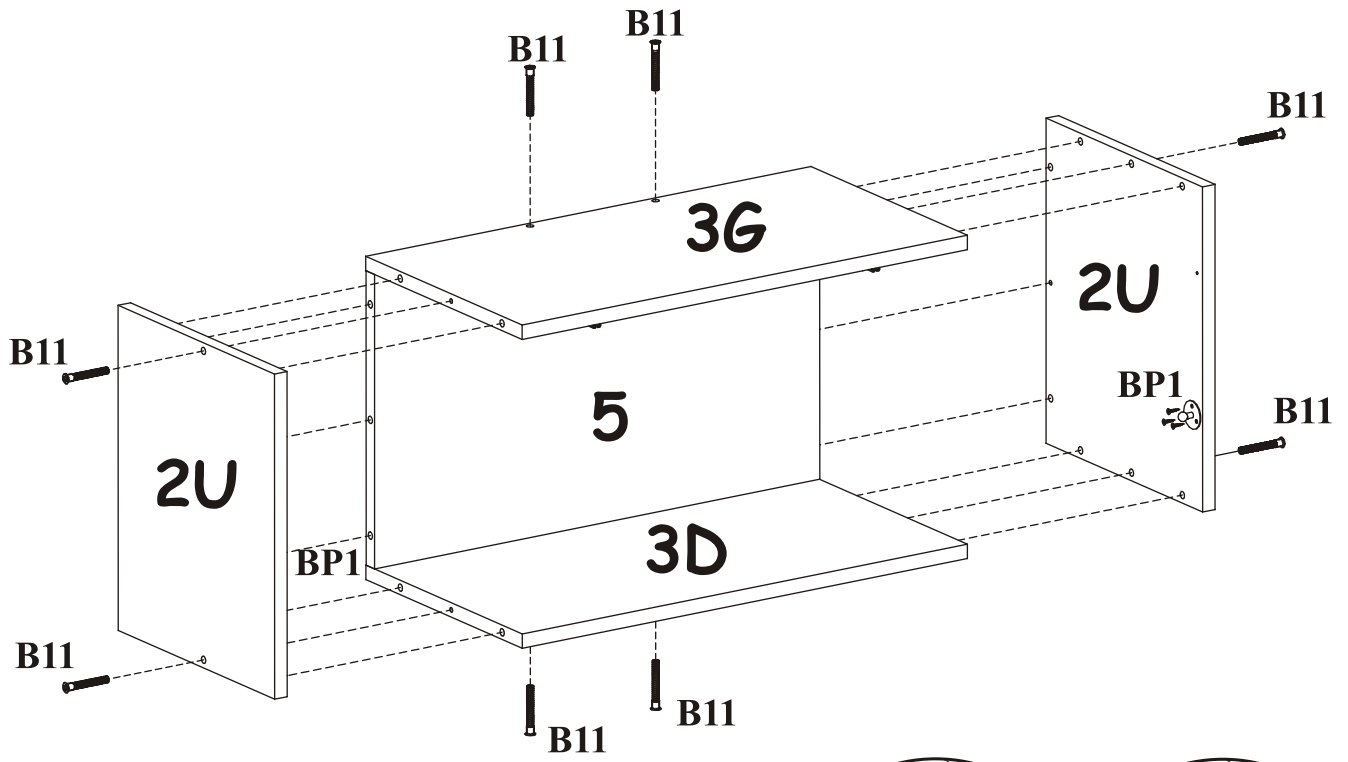

4

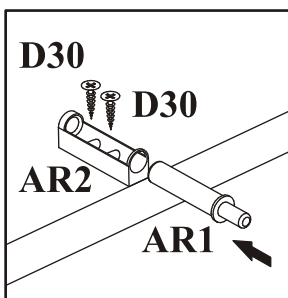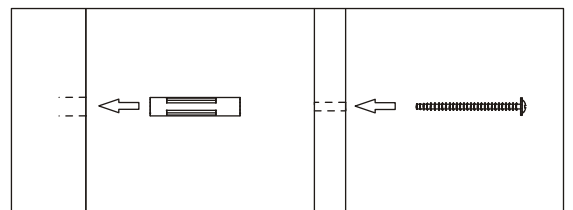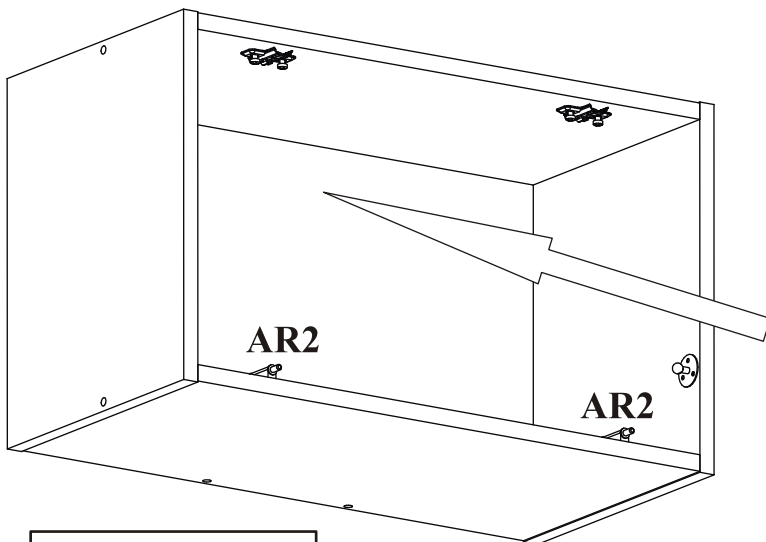

5

