




EURO

S60MI-BOX

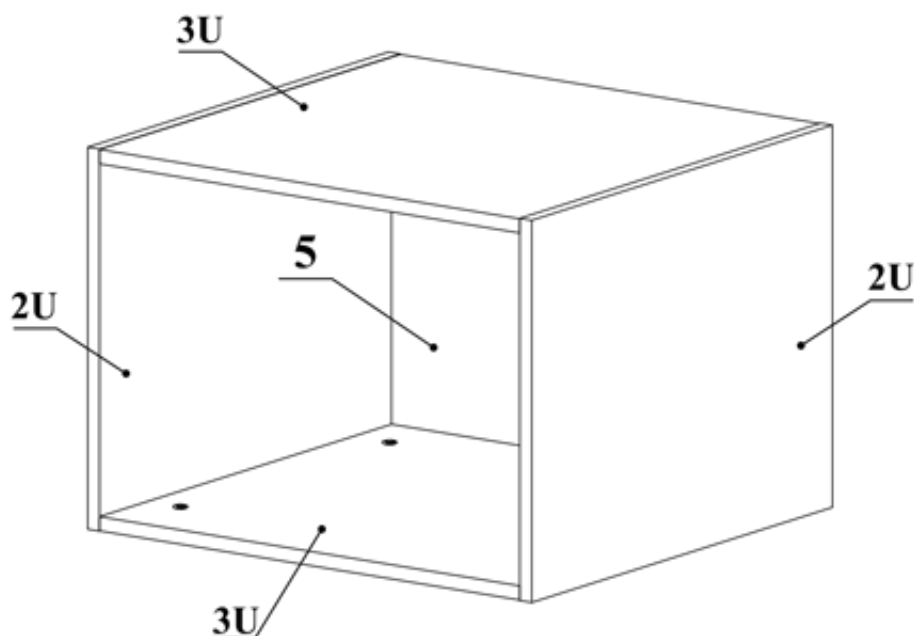



A1		B4		B5		G5		UP6		G2	
X16	Ø8x36	X10		X10	ø15x12	X10		X8	UPØ4x30	X1	

Check all the items are in your box according to the list on this manual. If you are missing anything, please check all other boxes first and then send us an email with a list of the parts you need.

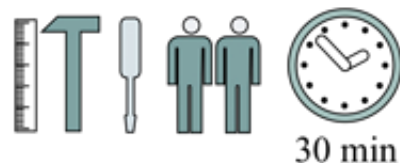


30 min



EURO S60MI-BOX

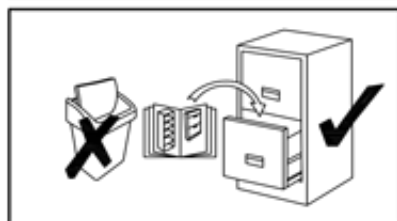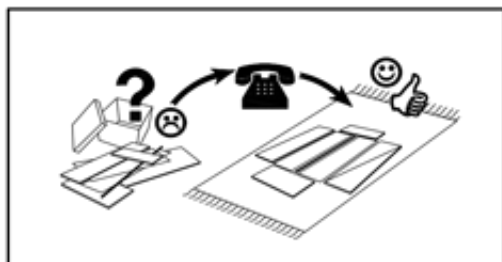



Keep your product assembly manual in a safe place until your kitchen is finished.

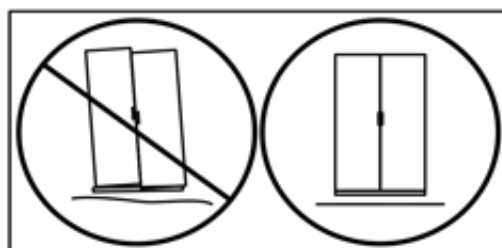


Be sure to assemble your cabinets on a flat surface and keep them straight and square.

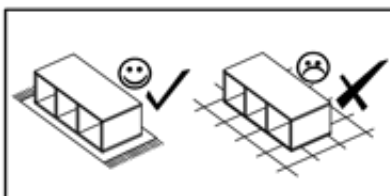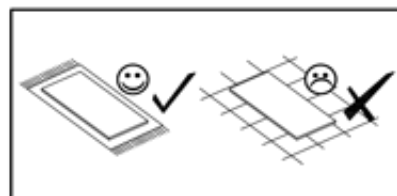

Assemble your cabinets on a rug or a surface that will not scratch or damage them.

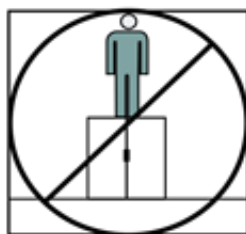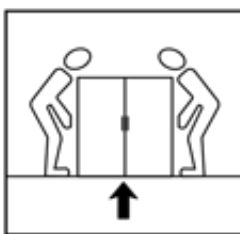

Do not push cabinets into place. Get someone to help you lift the cabinets into place, or you could risk damaging the feet.
Do not stand on the cabinets.

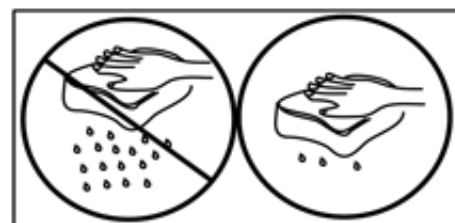


Once protective film on thermal wrap doors is removed, do not clean for 7 days. This allows the surface to harden. Only clean the cabinets with a small amount of warm water or non harsh chemicals.



EURO S60MI-BOX

1

Push the B5 Cam parts into the holes on the panels.

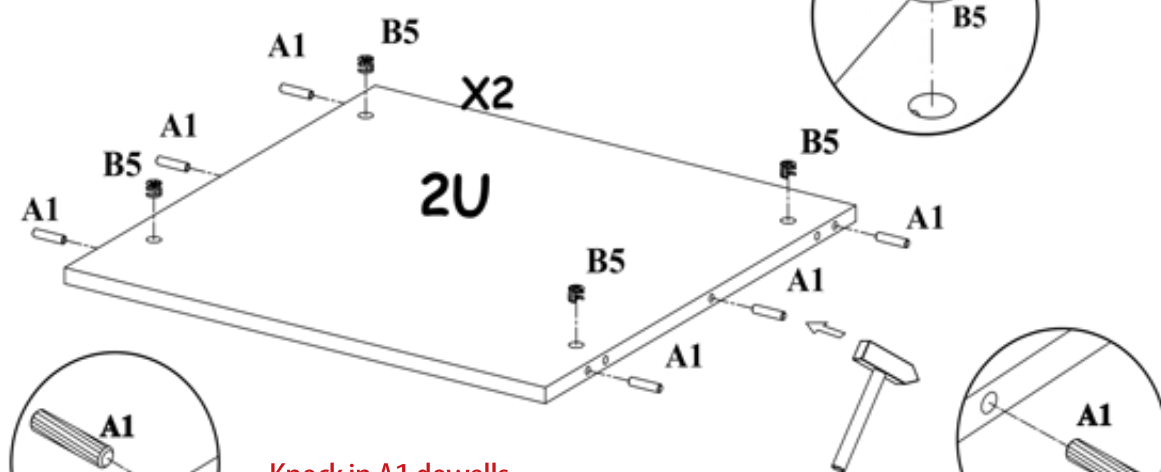

Knock in A1 dowells

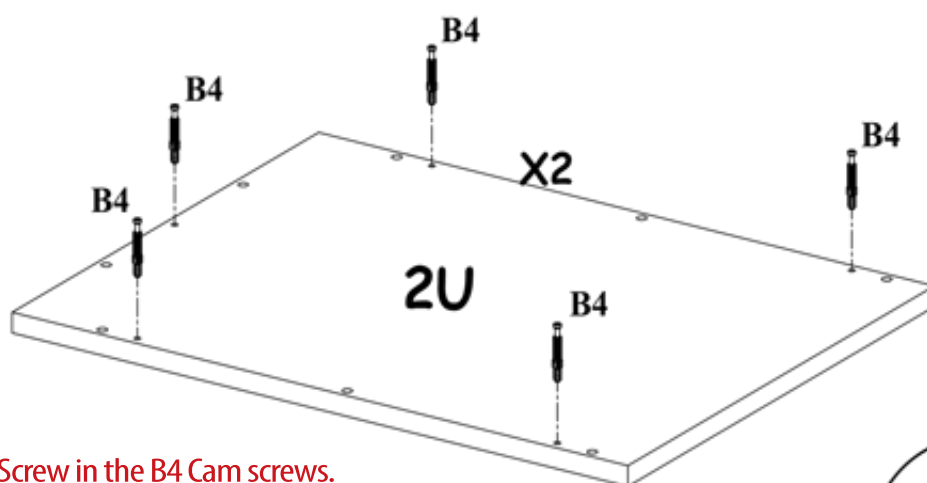
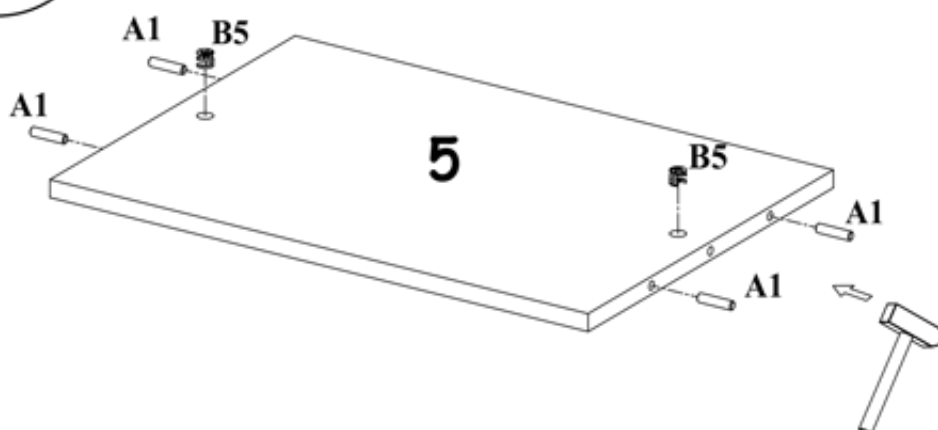


Screw in the B4 Cam screws.




EURO S60MI-BOX

- 2** Push the side panels together so that the B4 cam screws and the dowells slide into the holes.

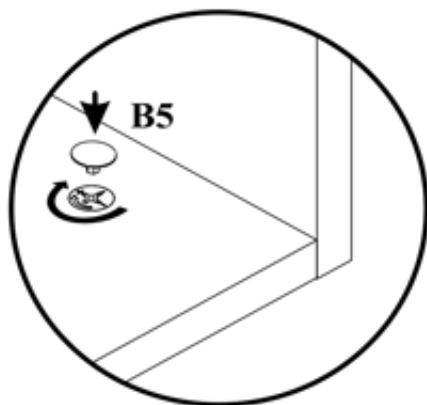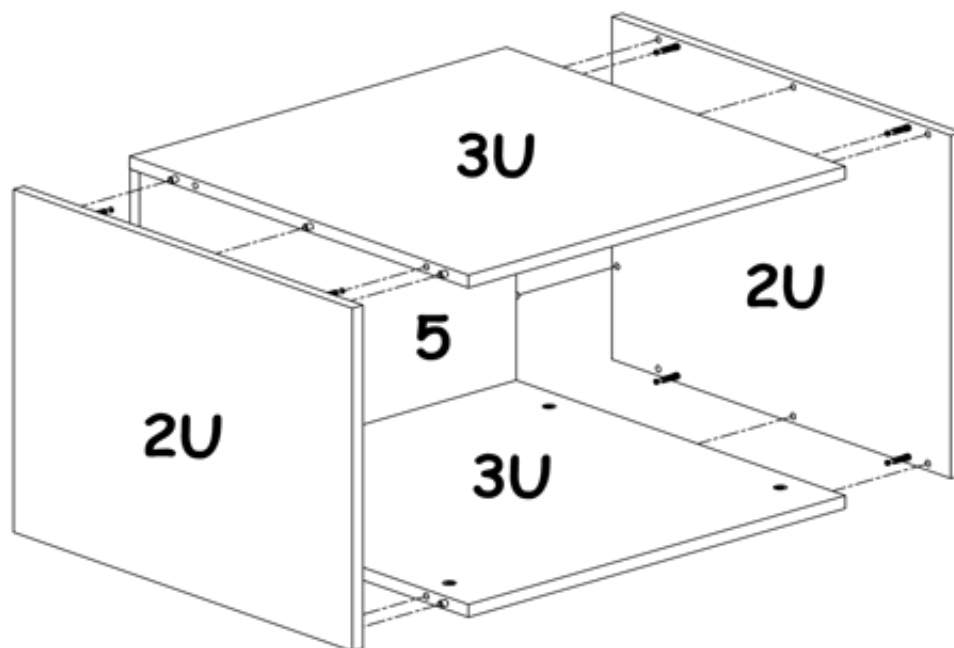

Push the B5 Cam parts into the holes on the panels.

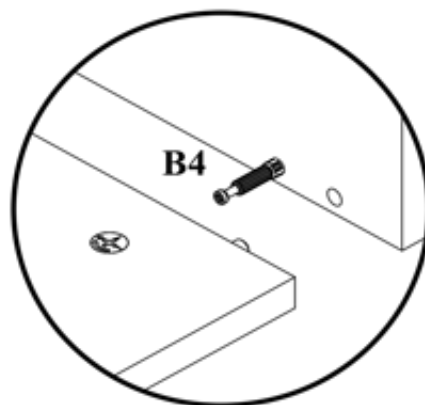

Push the side panels into either side of the back panel so that the B4 cam screws and the dowells slide into the holes.