



Assembly Instructions for cabinets: W60, W80


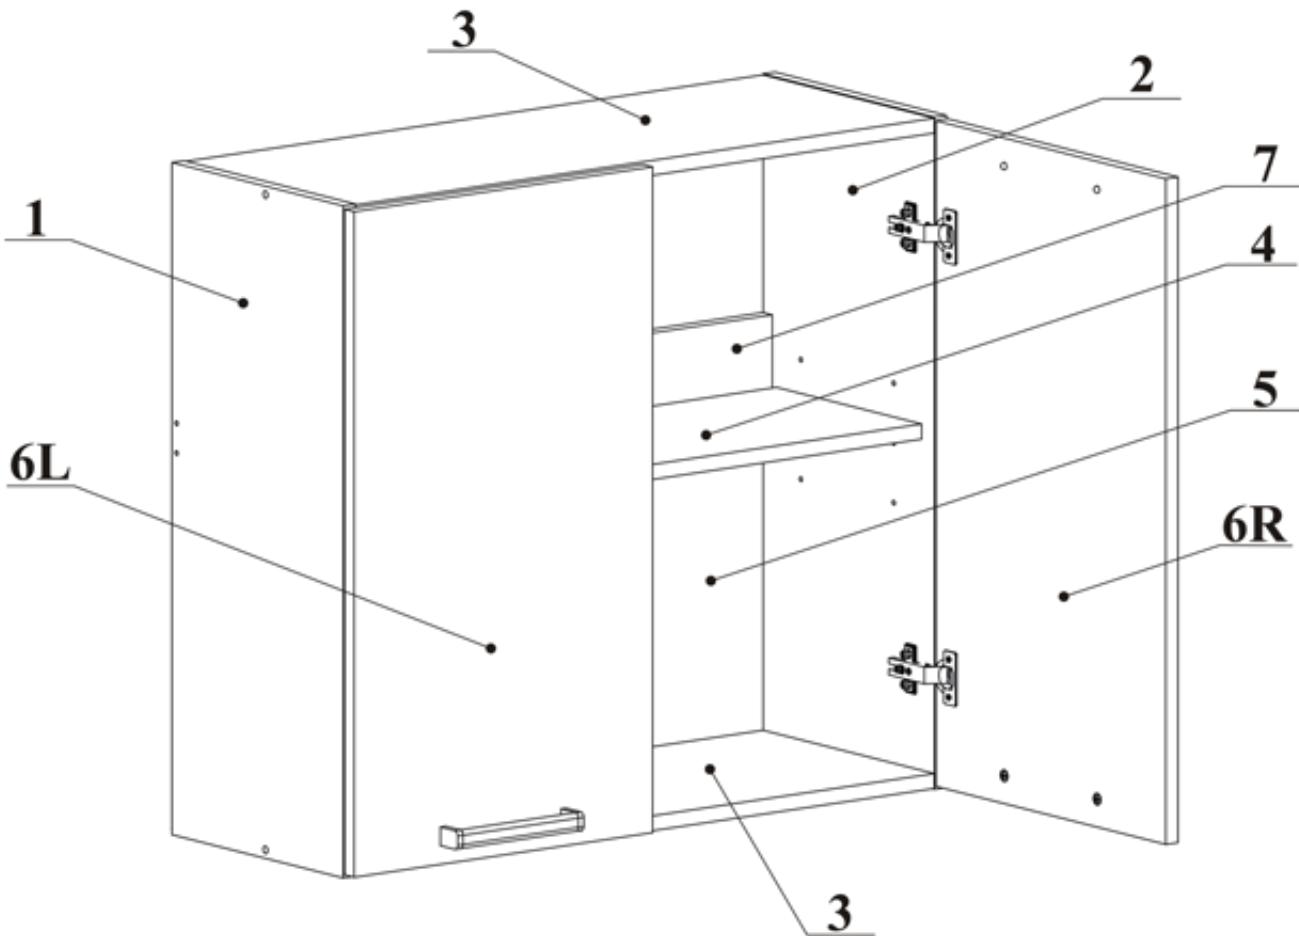


Check all the items are in your box according to the list on this manual. If you are missing anything, please check all other boxes first and then send us an email with a list of the parts you need.




A1		ZN		D26		G7		B11		G4	
X8		X2		X4		X4		X4		X4	
E7		E8		D10		Z2		D40		G6	
X4		X4		X8		X4		X4		X4	
B3		G2		G8							
W60X26 W80X30		X1		X1							



W60, W80

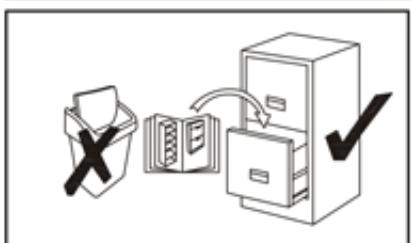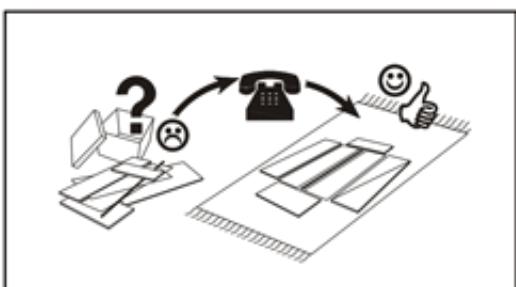




Keep your product assembly manual in a safe place until your kitchen is finished.

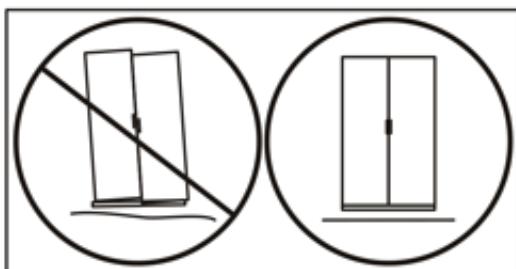

Be sure to assemble your cabinets on a flat surface and keep them straight and square.

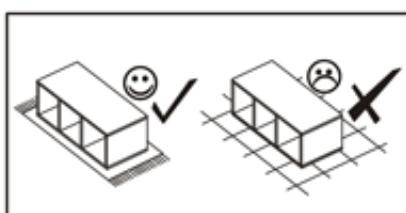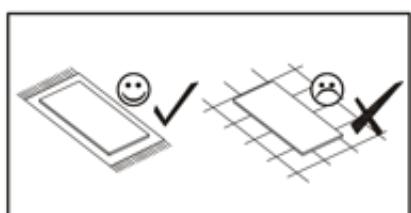

Assemble your cabinets on a rug or a surface that will not scratch or damage them.

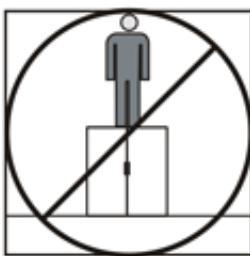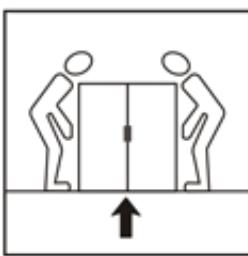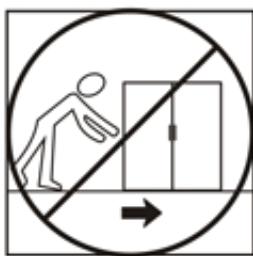

Do not push cabinets into place. Get someone to help you lift the cabinets into place, or you could risk damaging the feet.

Do not stand on the cabinets.










Once protective film on thermal wrap doors is removed, do not clean for 7 days. This allows the surface to harden. Only clean the cabinets with a small amount of warm water or non harsh chemicals.

W60, W80

1



Screw E7 hinges to insides of doors. Drill through and attach handles. Push in Z2 screwhole caps for unused holes.

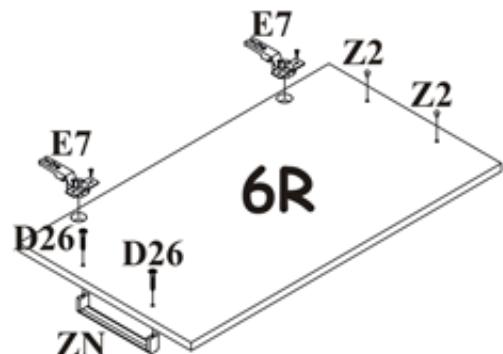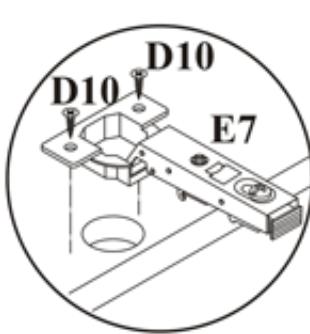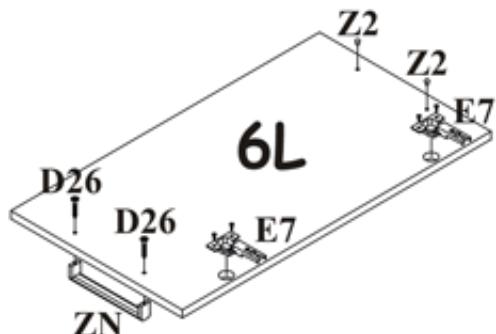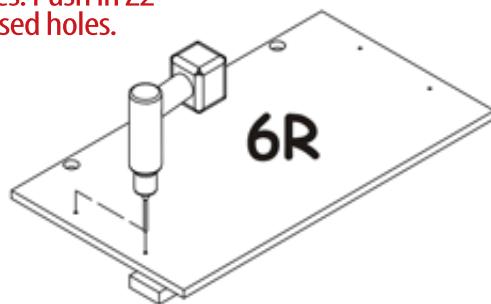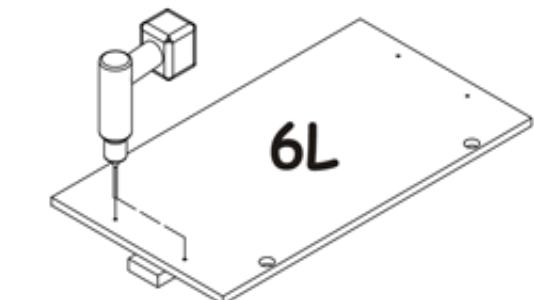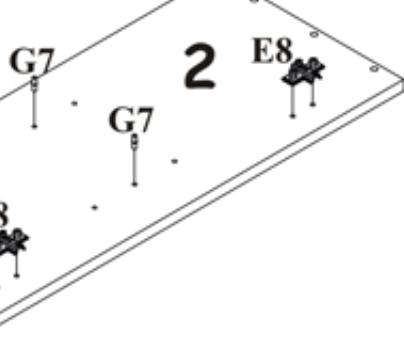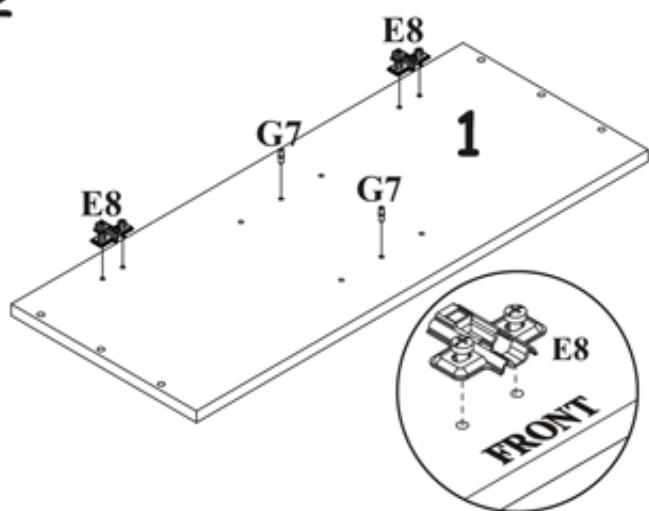**2**


Screw E8 hinge clips to insides of panels 1 &2. Push in G7 shelf pegs.

3


Knock in A1 dowells to base panel and top panel.

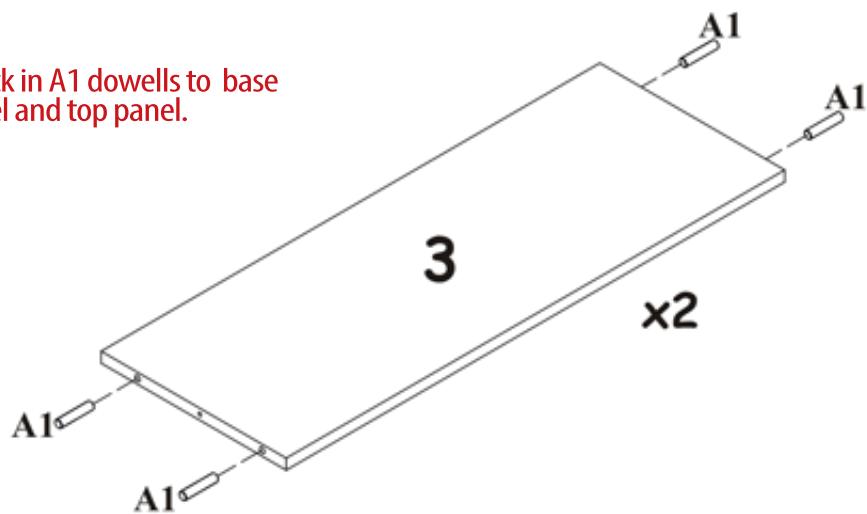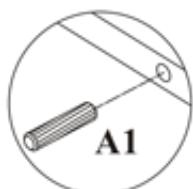




W60, W80

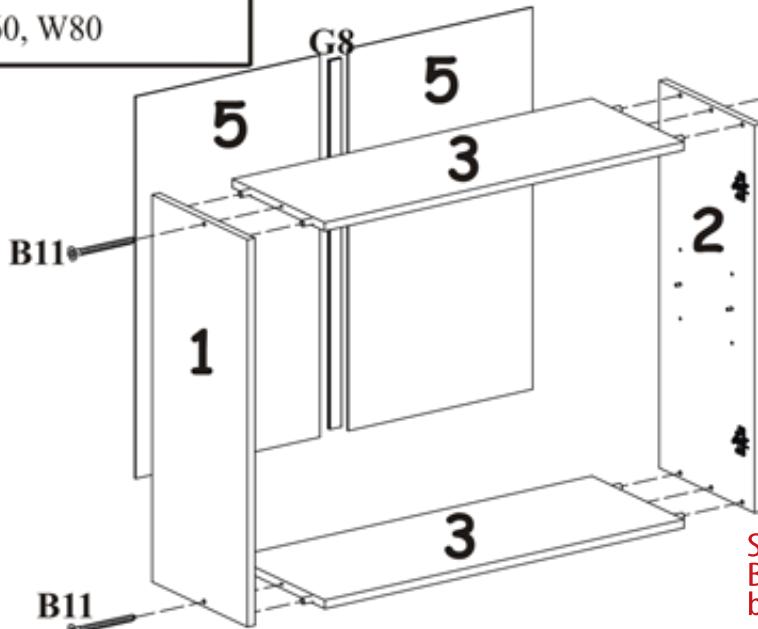4

Screw together cabinet frame with B11 screws and allen key tool. Join 2 back panels (5) with G8 joiner.

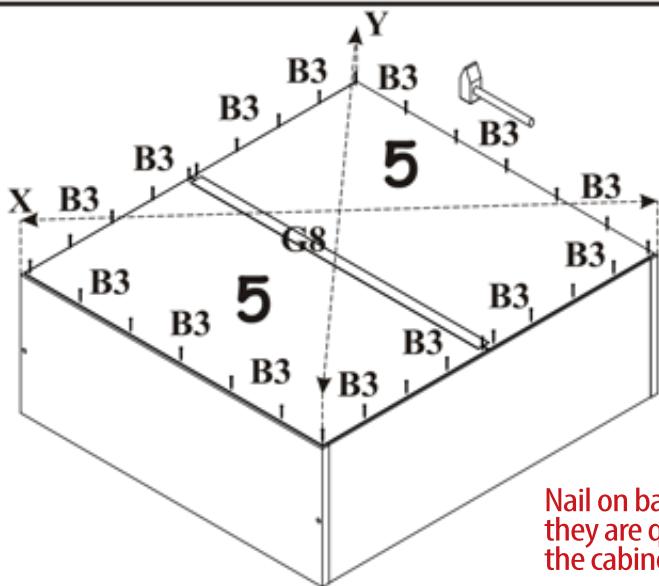5


Nail on back panels making sure they are square with the back of the cabinet.

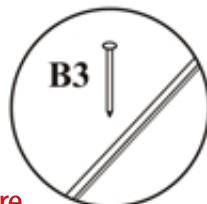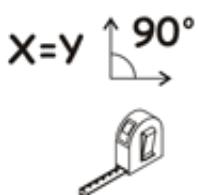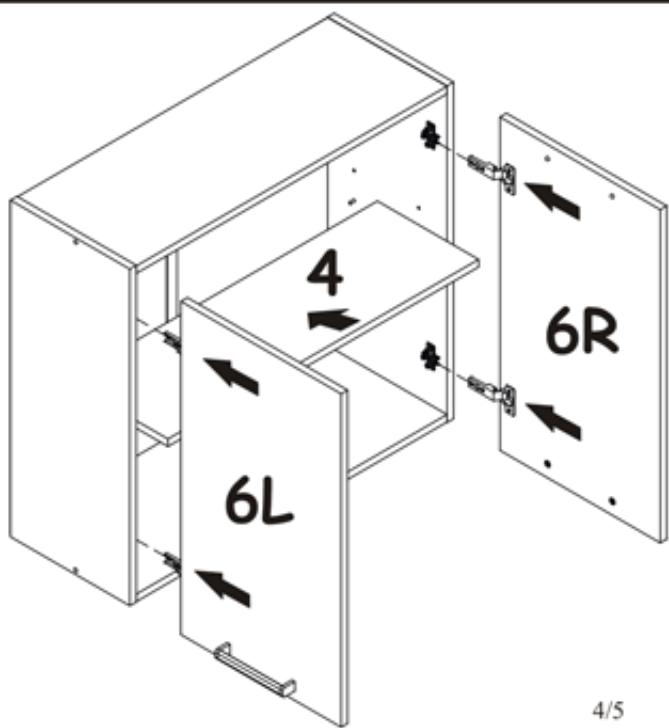**6**

Attach the doors by clipping the hinges onto the hinge clips. Use a phillips head screwdriver to adjust the tilt and rotation of the doors to make them level.

W60, W80

7

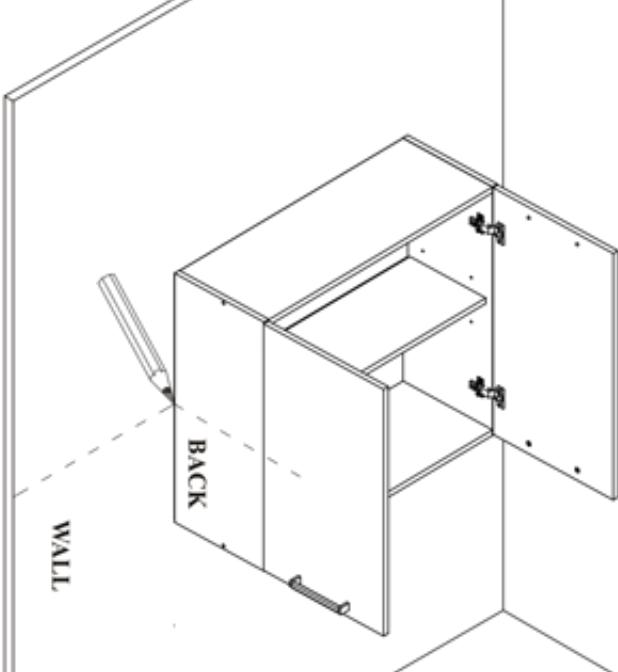


Mark on your wall the centre line where you will be fixing into the wall. Holding the cabinet in place where it will be fixed, follow this mark onto the side of the cabinet.

WALL
BACK

11mm

BACK


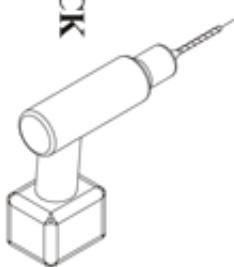


1

Mark 2 holes, 16mm either side of your line, and 11mm from the back of the cabinet. Drill the holes through.


9

Place panel 8 into the back of the cabinet and screw into place using the holes you drilled.

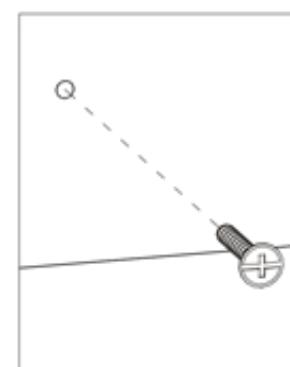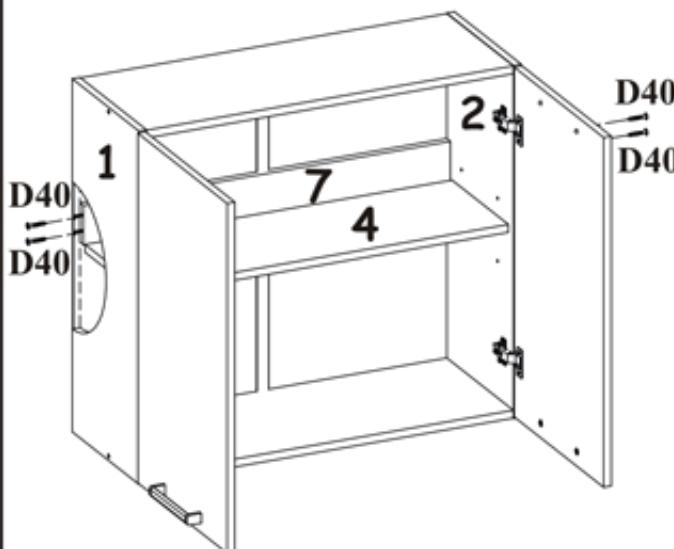

10

Visit your local hardware store to confirm and purchase the correct type of wall fixings to suit your wall type.
Now you can screw your cabinet to the wall through panel 7.

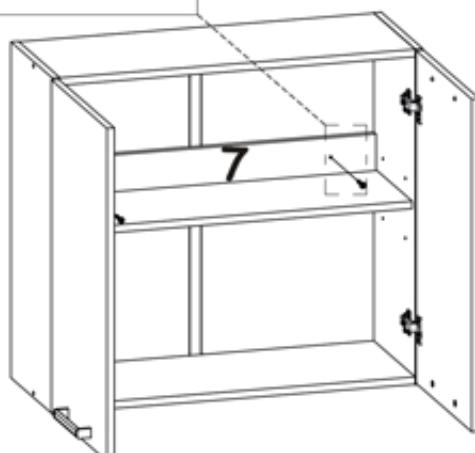

Cover screws with G6 screw caps.

**SCREWS FOR FIXING THE CABINET
MUST BE PURCHASED ON YOUR OWN
IN THE SPECIALISTIC SHOP**