








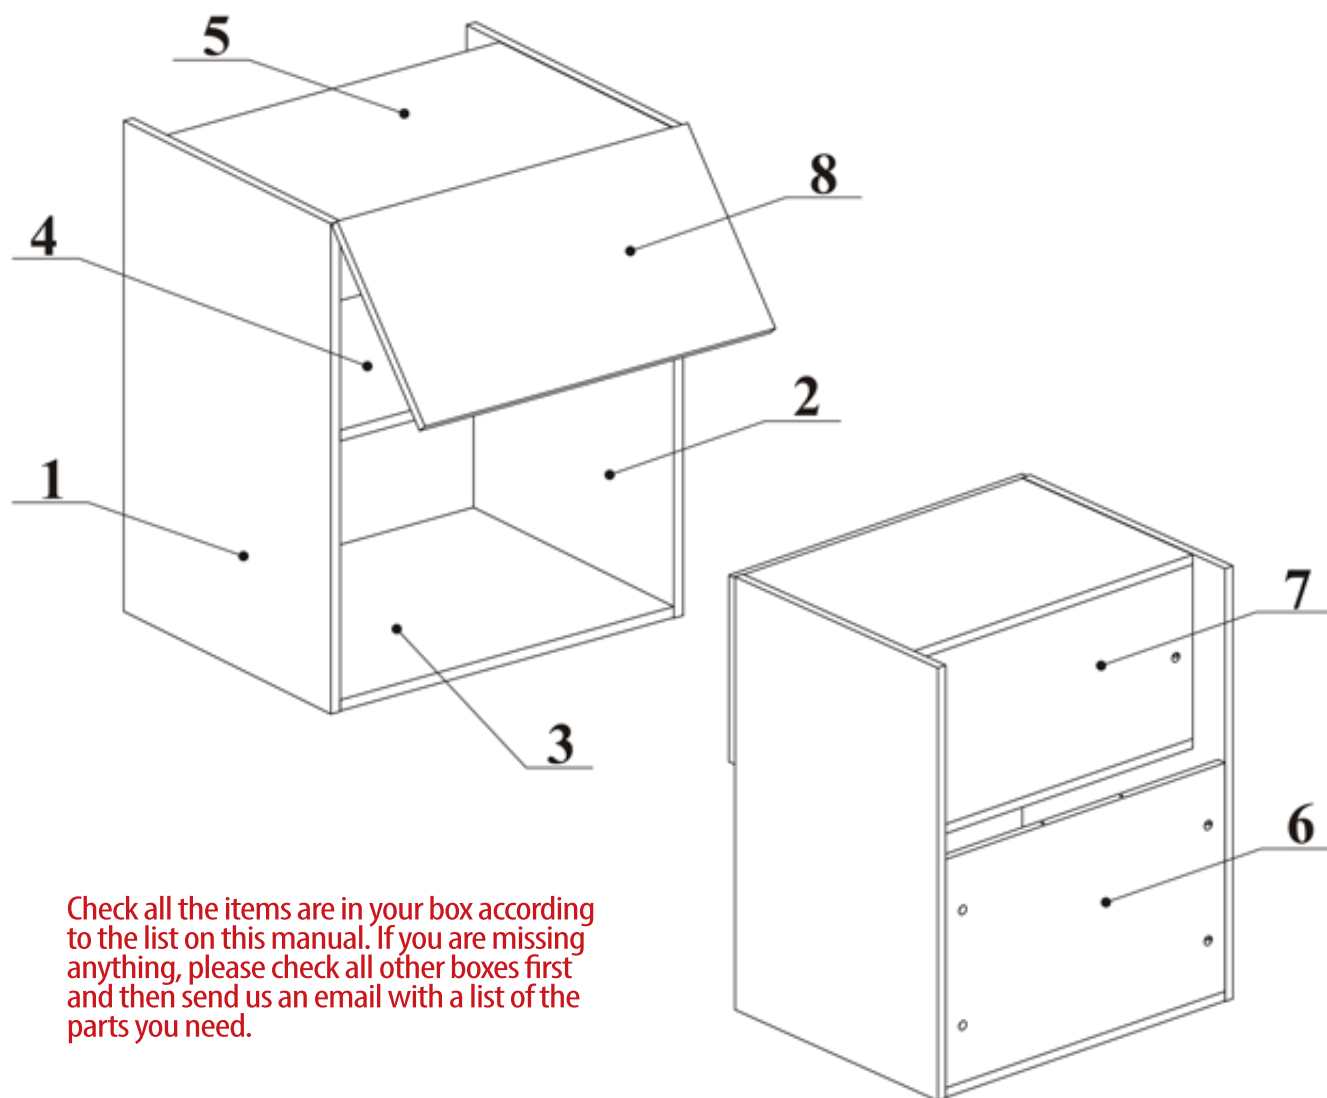

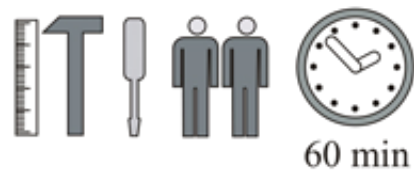







Assembly Instructions for cabinets: W 60 1K - MI



Check all the items are in your box according to the list on this manual. If you are missing anything, please check all other boxes first and then send us an email with a list of the parts you need.




A1 X26  ø8x36	B11 X24  Ø7x50	G4 X24 	B3 X12  Ø1,4x25	BP1 X1 	D30 X4  USØ3,5x16
D10 X6  USØ3,5x13	E21 X2  Ø35 H=0	E2 X1  H=0	AR1 X2 	AR2 X2 	G2 X1 
D26 X2  M4x22	ZN X1 				


W60 1K - MI





Check all the items are in your box according to the list on this manual. If you are missing anything, please check all other boxes first and then send us an email with a list of the parts you need.

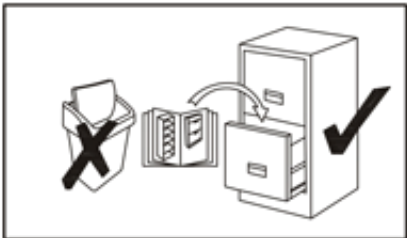



Keep your product assembly manual in a safe place until your kitchen is finished.

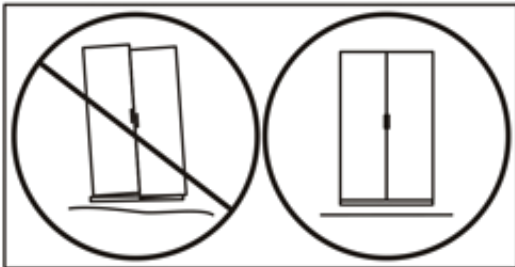


Be sure to assemble your cabinets on a flat surface and keep them straight and square.

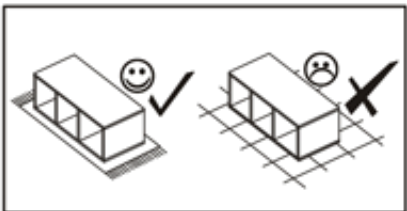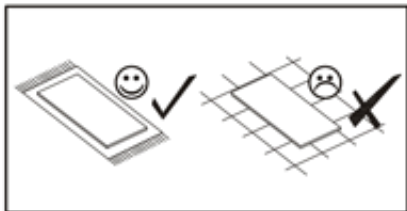

Assemble your cabinets on a rug or a surface that will not scratch or damage them.

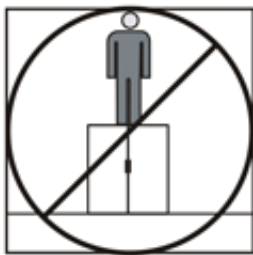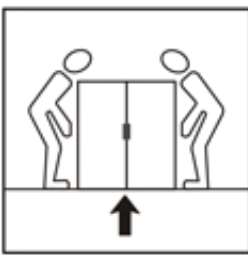


Do not push cabinets into place. Get someone to help you lift the cabinets into place, or you could risk damaging the feet.
Do not stand on the cabinets.

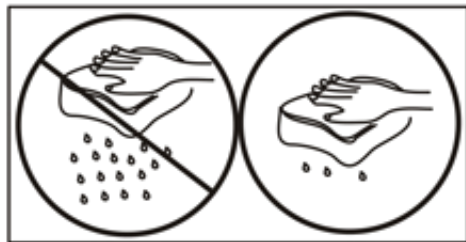


Once protective film on thermal wrap doors is removed, do not clean for 7 days. This allows the surface to harden. Only clean the cabinets with a small amount of warm water or non harsh chemicals.

W60 1K - MI

1


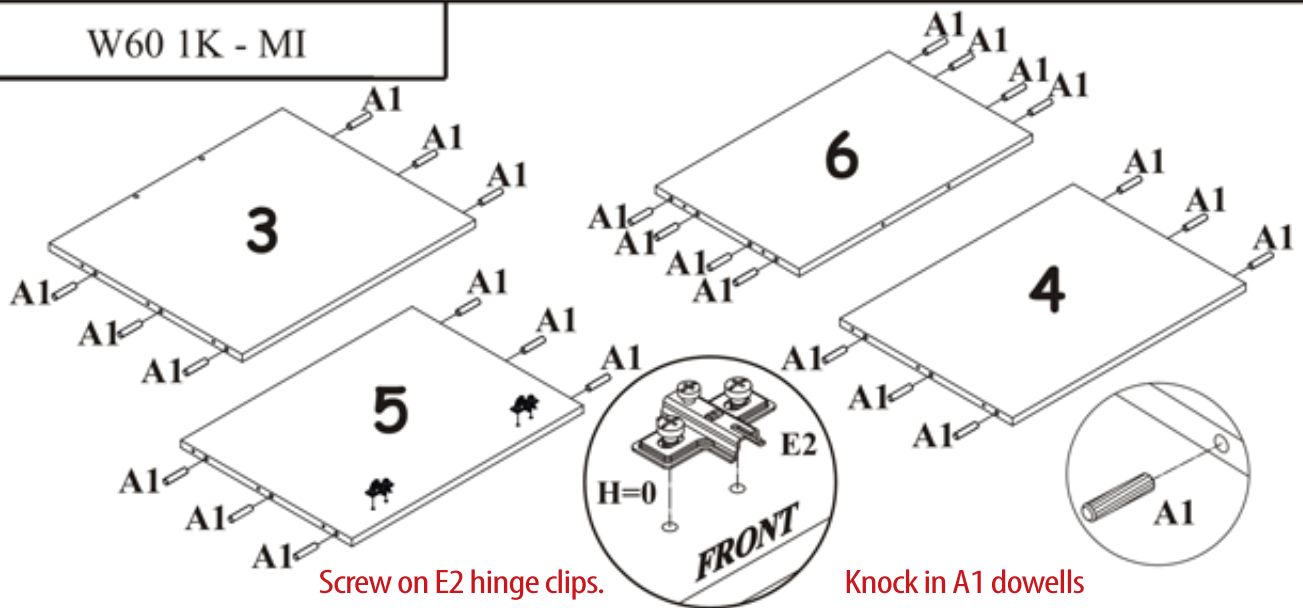


2

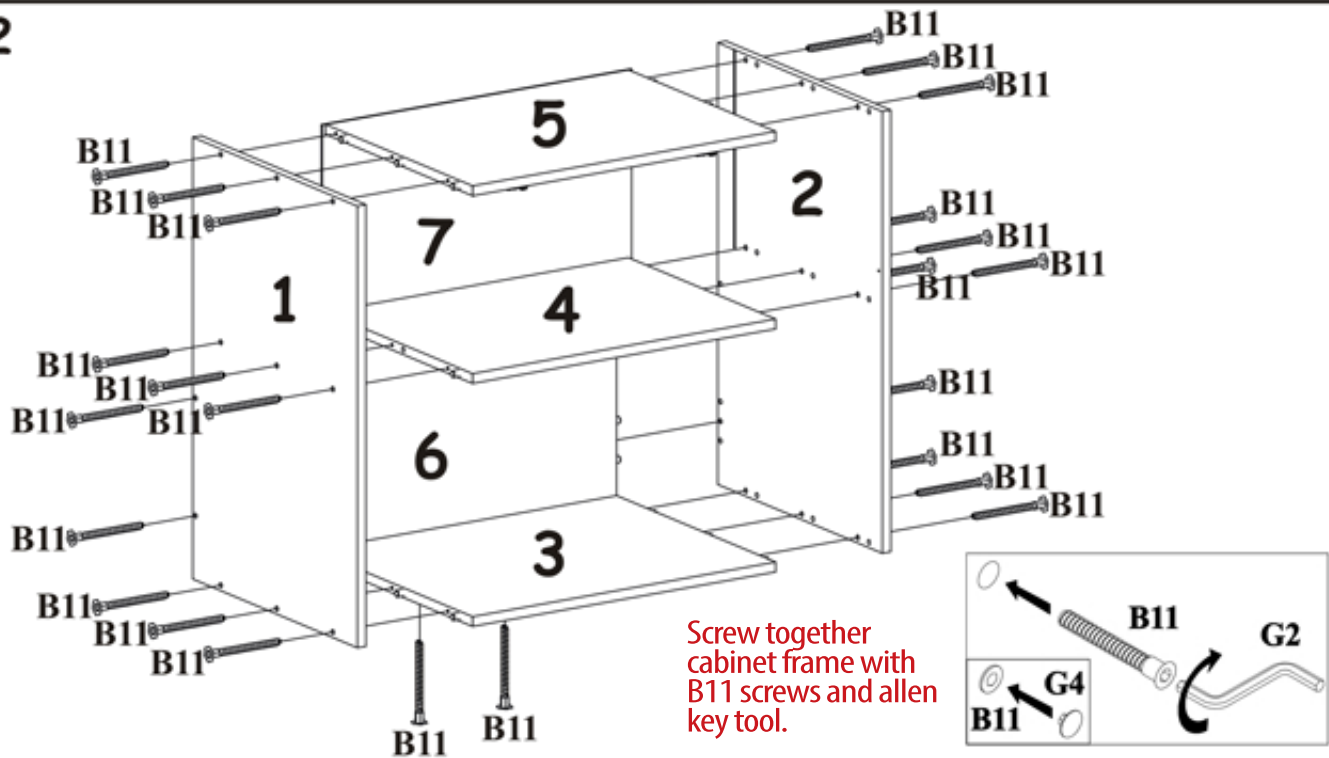


3

Nail on back panel 7.

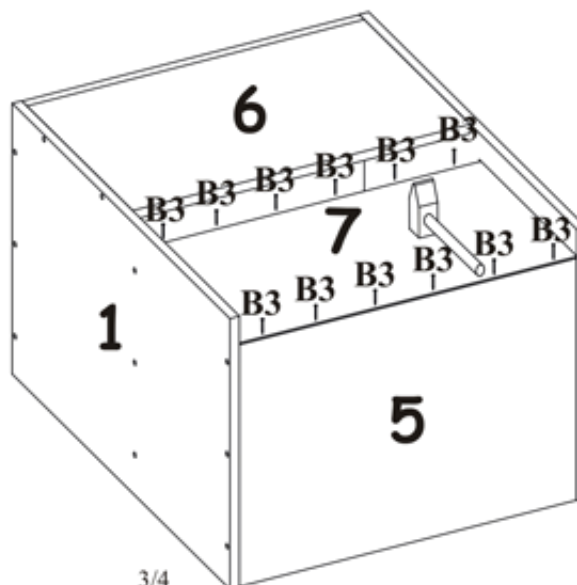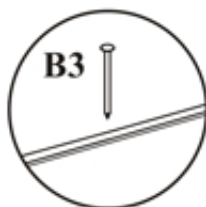


W60 1K - MI

4


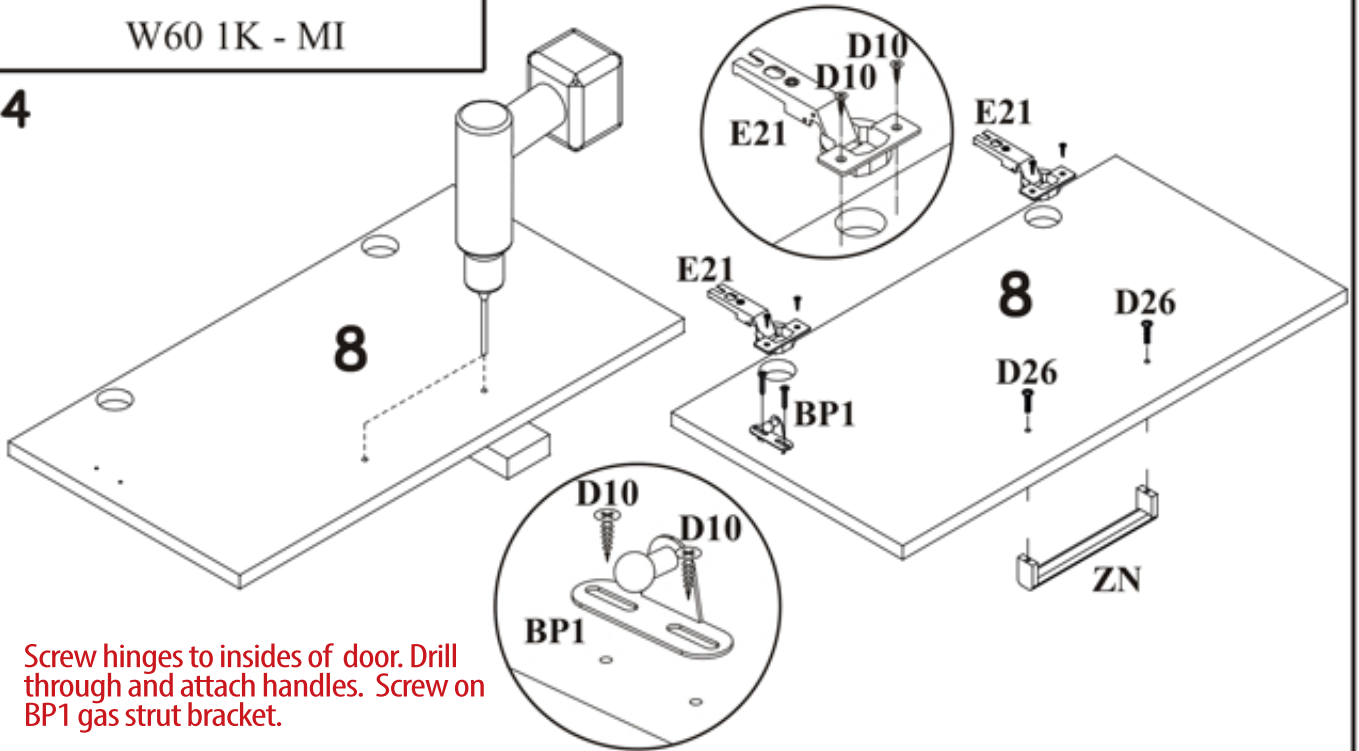


Screw hinges to insides of door. Drill through and attach handles. Screw on BP1 gas strut bracket.



5

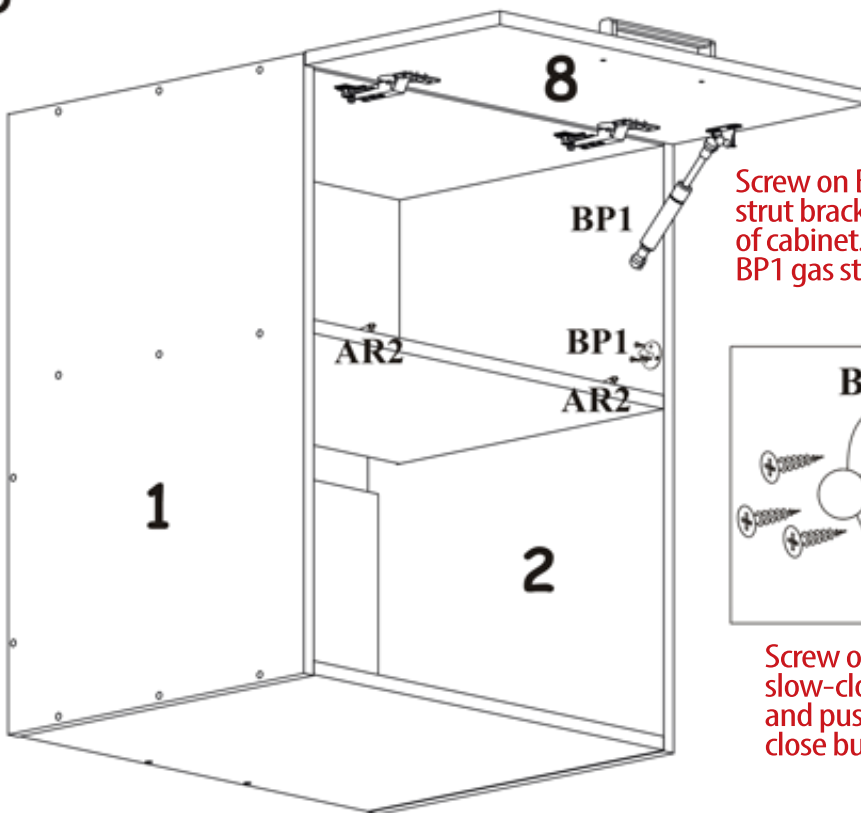

Screw on BP1 gas strut bracket to inside of cabinet. Attach BP1 gas strut arms.

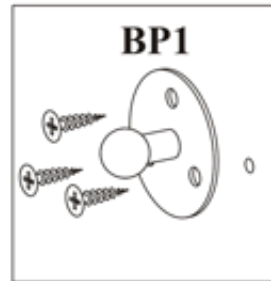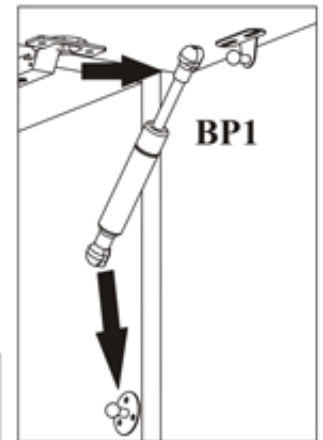

Screw on AR2 slow-close brackets and push in AR1 slow close buttons.

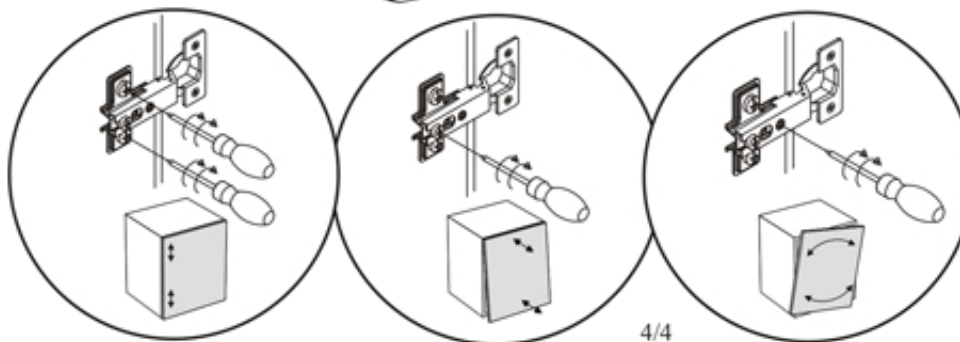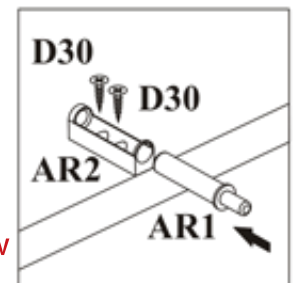

Use a phillips head screwdriver to adjust the tilt and rotation of the doors to make them level.