

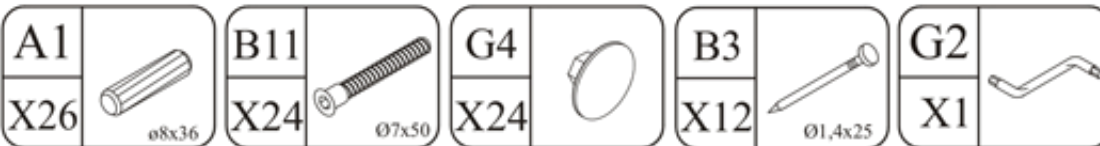
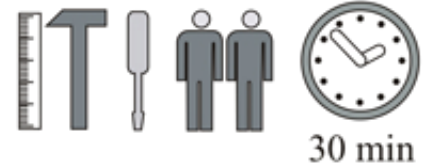



## Assembly Instructions for cabinets: W 60 MI

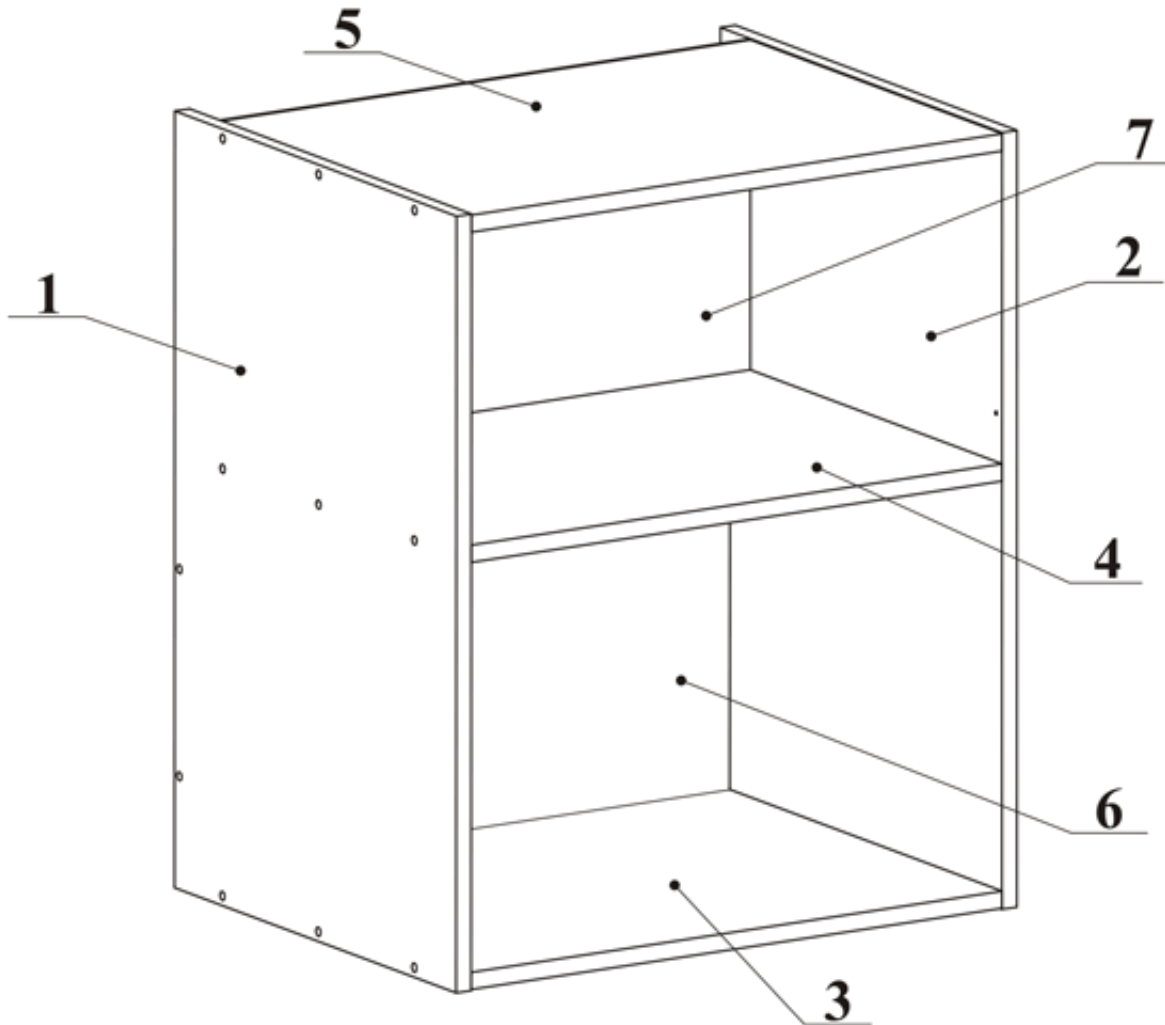


Check all the items are in your box according to the list on this manual. If you are missing anything, please check all other boxes first and then send us an email with a list of the parts you need.


W 60 MI

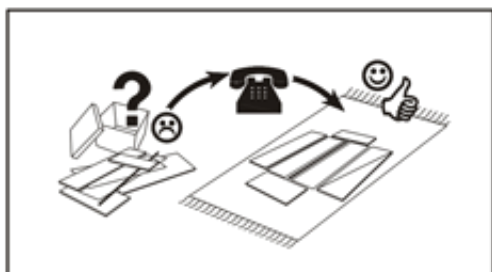



Check all the items are in your box according to the list on this manual. If you are missing anything, please check all other boxes first and then send us an email with a list of the parts you need.

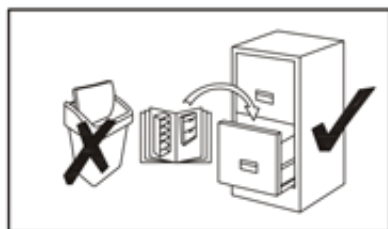



Keep your product assembly manual in a safe place until your kitchen is finished.

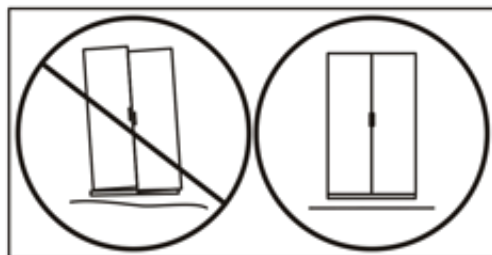

Be sure to assemble your cabinets on a flat surface and keep them straight and square.

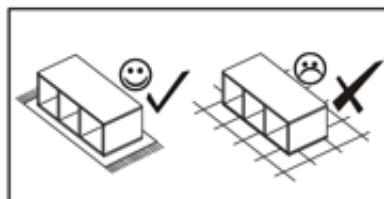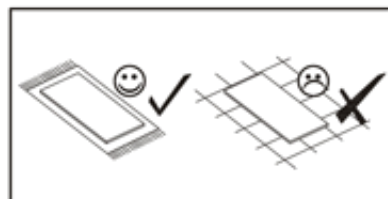


Assemble your cabinets on a rug or a surface that will not scratch or damage them.

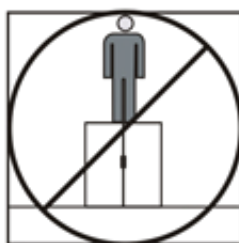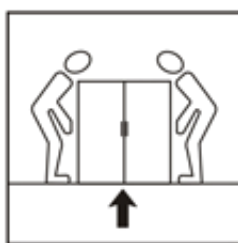

Do not push cabinets into place. Get someone to help you lift the cabinets into place, or you could risk damaging the feet.

Do not stand on the cabinets.

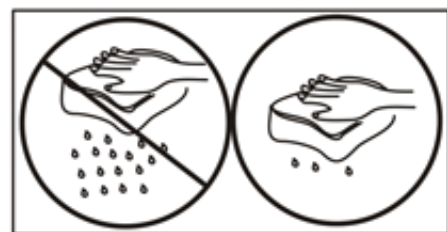

Once protective film on thermal wrap doors is removed, do not clean for 7 days. This allows the surface to harden. Only clean the cabinets with a small amount of warm water or non harsh chemicals.

